
PAC900S12-B2 PSU

Technical Manual

Issue 02

Date 2026-01-20

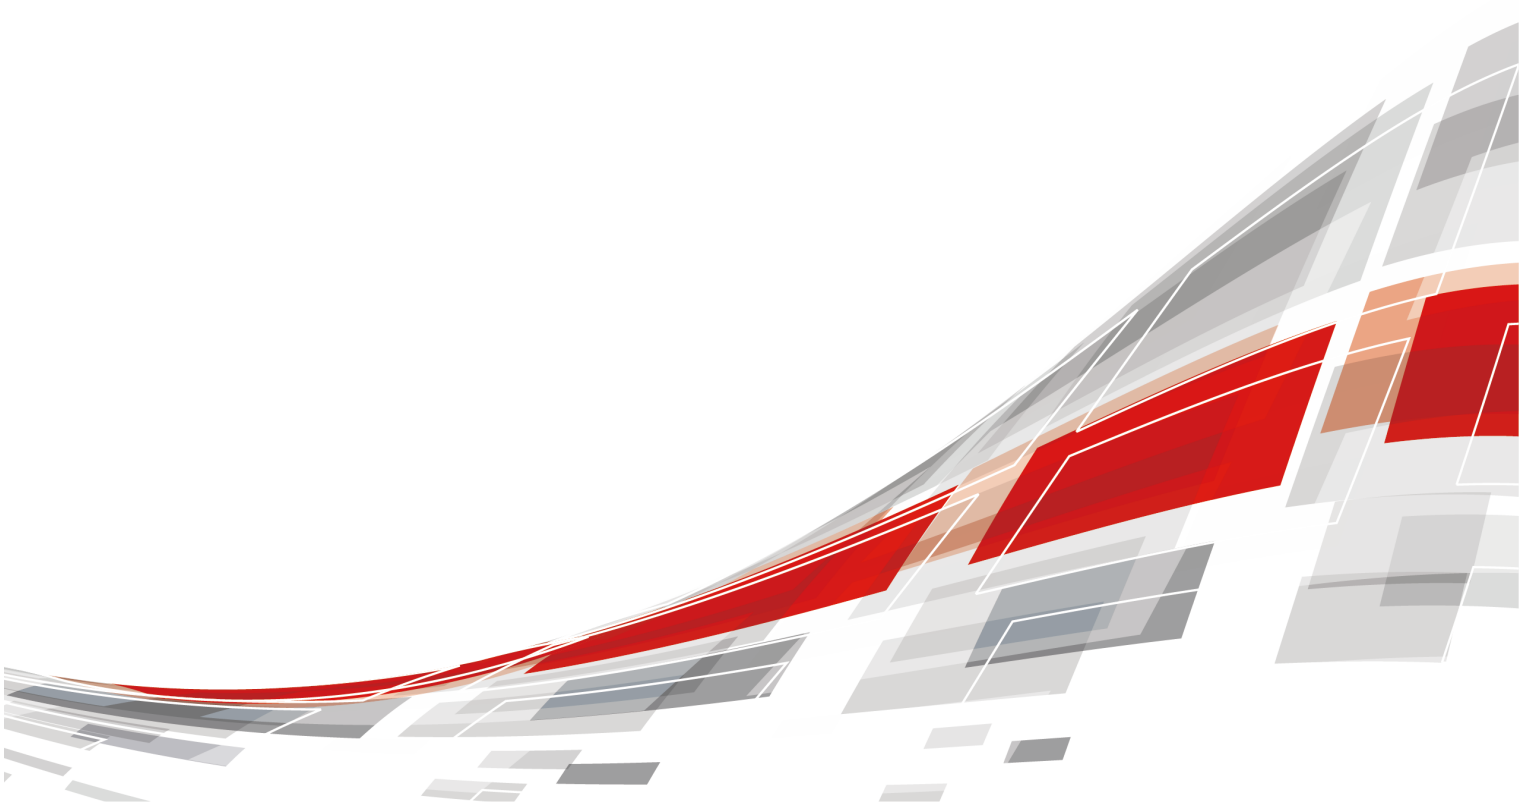

XFUSION INTERNATIONAL PTE. LTD.

Copyright © XFUSION INTERNATIONAL PTE. LTD. 2026. All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of XFUSION INTERNATIONAL PTE. LTD.

Trademarks and Permissions

XFUSION and other xFusion trademarks are trademarks of XFUSION INTERNATIONAL PTE. LTD. All other trademarks and trade names mentioned in this document are the property of their respective holders.

Notice

The purchased products, services and features are stipulated by the contract made between xFusion and the customer. All or part of the products, services and features described in this document may not be within the purchase scope or the usage scope. Unless otherwise specified in the contract, all statements, information, and recommendations in this document are provided "AS IS" without warranties, guarantees or representations of any kind, either express or implied.

The information in this document is subject to change without notice. Every effort has been made in the preparation of this document to ensure accuracy of the contents, but all statements, information, and recommendations in this document do not constitute a warranty of any kind, express or implied.

XFUSION INTERNATIONAL PTE. LTD.

Website: https://www.xfusion.com

About This Document

Purpose

This document describes the PAC900S12-B1, PAC900S12-B2 and PAC900S12-BE (hereinafter referred to as "PAC900S12-B*") power supply units (PSUs), including the functions and applications of their pins, as well as their heat dissipation and storage requirements.

The figures provided in this document are for reference only.

Intended Audience

This document is intended for pre-sales engineers.

Symbol Conventions

The symbols that may be found in this document are defined as follows:

Symbol	Description
DANGER	Indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.
WARNING	Indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.
CAUTION	Indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.
NOTICE	Indicates a potentially hazardous situation which, if not avoided, could result in equipment damage, data loss, performance deterioration, or unanticipated results. NOTICE is used to address practices not related to personal injury.
NOTE	Supplements the important information in the main text. NOTE is used to address information not related to personal injury, equipment damage, and environment deterioration.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Contents

About This Document ii

1 Safety Precautions 1

1.1 General Safety 1

1.2 Personnel Requirements 2

1.3 Electrical Safety 3

2 Product Overview 4

3 Product Structure Overview 6

3.1 Structural Dimensions 6

3.2 External Ports 7

3.3 LED Indicator 8

4 Electrical Specifications 10

4.1 Environmental Characteristics 10

4.2 Input Characteristics 11

4.3 Output Characteristics 14

4.4 Efficiency Characteristics 18

4.5 Protection Characteristics 19

5 Parallel Operation 24

6 Hot Swap Requirements 25

7 Energy Saving Feature 26

7.1 Active/Standby (Hot Standby) Power Supply 26

7.2 Active/Standby N+R Load Mode 28

7.3 Deep Sleep Function 30

7.4 Cold Standby Energy Saving Function (Reserved) 31

8 Feature Curves 33

9 Typical Waveforms 35

9.1 Turn-on/Turn-off 35

9.2 Output Voltage Dynamic Response 36

9.3 Output Voltage Ripple and Noise 38

10 Control Signals 39

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

10.1 PSU Timing....40
10.2 ORing-FET....41
10.3 PSON12V#....42
10.4 PRESENT#....43
10.5 INSTALLED#....44
10.6 OPOK#....44
10.7 IPOK....46
10.8 IPOK LINK....47
10.9 IP PRESENT....48
10.10 CYC_PWR#....48
10.11 I-MON#....49
10.12 PS_INTERRUPT....50
10.13 EFUSEV....50
10.14 SMART_ON#....51
11 Communication....52
11.1 Data Link Layer Protocol....52
11.1.1 I2C Signal....52
11.1.2 I2C Address....53
11.1.3 Data Transmission Mode....53
11.1.4 Bus Timeout....54
11.2 Network Layer Protocol....54
11.2.1 Secondary Addressing Method....54
11.2.2 Data Packet Verification Mode....54
11.2.3 Data Transmission....55
11.3 Application Layer Protocol....56
11.3.1 Data Format....56
11.3.2 Commands....58
11.3.3 Command Descriptions....63
11.4 Online Upgrade....65
11.5 Black Box Function....66
11.5.1 Runtime Counter....66
11.5.2 Event Log Update....66
11.5.3 Format of Reading Logs....66
12 Heat Dissipation Requirements and Fan Control....67
13 Product Storage, and Transportation....69
A Appendix....70
A.1 EMC Requirements....70
A.2 Product Safety Testing....72
A.3 Reliability....73

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

1 Safety Precautions

1.1 General Safety

1.2 Personnel Requirements

1.3 Electrical Safety

1.1 General Safety

Statement

Before installing, operating, and maintaining the device, read this document and observe all the safety instructions on the device and in this document.

The "NOTICE", "CAUTION", "WARNING", and "DANGER" statements in this document do not cover all the safety instructions. They are only supplements to the safety instructions. xFusion will not be liable for any consequence caused by the violation of general safety requirements or design, production, and usage safety standards.

Ensure that the PSU is used in environments that meet its design specifications. Otherwise, the PSU may become faulty, and the resulting malfunction, component damage, personal injuries, or property damage are not covered by the warranty.

Follow local laws and regulations when installing, operating, and maintaining the PSU. The safety instructions in this document are only supplements to local laws and regulations.

xFusion will not be liable for any consequences of the following circumstances:

- Although the device has passed security and compatibility tests, the radio frequency and magnetic fields emitted from the device may have a negative impact on the operation of other electronic devices. The device may affect normal operation of implanted medical appliances or personal medical appliances, such as pacemakers, cochlear implants, and hearing aids. If such appliances are used, consult the appliance manufacturer about the restrictions for using this device.
- Operation beyond the conditions specified in this document.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

- Installation or use in environments which are not specified in relevant international or national standards.
- Unauthorized modifications to the product or software code or removal of the product.
- Failure to follow the operation instructions and safety precautions on the product and in this document.
- Equipment damage due to force majeure, such as earthquakes, fire, and storms.
- Damage caused during transportation by the customer.
- Storage conditions that do not meet the requirements specified in this document.
- Do not drop, squeeze, or pierce the PSU. Protect the PSU from external high pressure to prevent internal short circuits and overheating.
- Do not disassemble, refit, or insert foreign objects into the PSU, or expose the PSU to water or other liquids, so as to avoid short circuits, overheating, fire, or electric shocks.
- Use the PSU at a temperature ranging from 5°C to 55°C (41°F to 131°F) and store the PSU at a temperature ranging from –40°C to +85°C (-40°F to +185°F).
- Do not expose the PSU to heat sources such as direct sunlight, radiators, microwave ovens, ovens, or water heaters.
- If the PSU is damaged, cracked, or wet, stop using it. Continuing to use it in such conditions may lead to electric shocks, short circuits, or fire.
- Dispose of the PSU in accordance with local regulations. Do not dispose of it as normal household waste. Follow local regulations on disposal of the PSU and its accessories, and support proper collection and recycling.
- Keep the PSU dry. Do not use the PSU in a dusty or damp place. Otherwise, the PSU may be faulty. Do not splash water on the PSU. Keep the PSU far away from fire sources. Do not ignite the PSU.

⚠ WARNING

In a household scenario, operation of this device may cause wireless interference.

Personal Safety

- Do not alter, disassemble, or remove the shell of the PSU.
- If there is a probability of personal injury or PSU damage during operations on the PSU, immediately stop the operations, report the case to the supervisor, and take feasible protective measures.
- Before the installation is completed or confirmed by professionals, do not power on the PSU.

1.2 Personnel Requirements

- Personnel who plan to install, operate or maintain the PSU must receive thorough training, understand all necessary safety precautions, and be able to correctly perform all operations.
- During the installation, operation, and maintenance of the PSU, no collision or drop is allowed.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

- During the secondary assembly of the PSU, do not introduce conductive foreign objects.

1.3 Electrical Safety

Operation Requirements

⚠ WARNING

Failure to follow the operating procedures may cause personal injury or even death.

- Only qualified personnel are allowed to perform operations to prevent electric shocks.
- Before installing or removing the PSU, disconnect the upstream power supply to the PSU.
- Before powering on the PSU, ensure that the PSU cables are correctly connected.
- Before making electrical connections, disconnect the upstream power supply to the PSU if people may contact energized components.
- Do not open, alter, or repair the product as the voltage inside the product is high.
- To ensure safety, connect the shell ground and the device ground reliably. When installing the device, install the PGND cable first. When uninstalling the device, remove the PGND cable last.
- Do not operate the PSU with wet hands. Otherwise, electric shocks may occur.
- The voltage between the L or N terminal of the PSU and the PE terminal cannot exceed 318 V AC.
- If any damage or fault occurs during installation or operation, power off the PSU immediately and return it to the manufacturer for inspection or repair.
- In case of emergency, remove the power plug from the power outlet to completely cut off the power supply.
- If the PSU has multiple inputs, disconnect all the inputs to completely power it off before operating the PSU.

ESD

- When installing, operating, and maintaining the PSU, comply with the ESD protection regulations and wear the ESD clothing, gloves, and wrist strap.
- When holding the PSU, hold its edge without touching any components. Do not touch the components with your bare hands.
- Package the removed PSU with ESD packaging materials before storing or transporting it.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

2 Product Overview

The PAC1500S12-B* supports AC input of 90 V to 264 V or HVDC input of 180 V to 300 V. The PSU provides one output and can work in three modes (MV12, SV12 and MV6). The rated output power is 900 W.

The hot swappable PSU supports current sharing and 1+1 or 2+2 redundancy. The PSU supports PMBus communication, and sends the PSU information to the system to facilitate monitoring and management.

Figure 2-1 PAC900S12-B*



Model Naming Convention

P	AC	900	S	12	–	B	*
1	2	3	4	5		6	7

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

No.	Description	No.	Description
1	Embedded power	2	AC input
3	Output power: 900 W	4	Single output
5	Output voltage: 12 V DC	6	Platinum energy efficiency certification
7	Serial number	-	-

Features

- Efficiency: 94% (V_{in} = 230 V AC, P_{out} = 450 W, T_A = 25°C (77°F), without a fan)
- Depth x Width x Height: 183.0mm×68.0mm×40.3mm (7.20in.×2.68in.×1.59in.)
- Weight: <2kg
- Supports AC input protection for undervoltage, overvoltage, overcurrent, short circuit, and Power Factor Correction (PFC) overvoltage.
- Supports HVDC input protection for overvoltage, undervoltage, and PFC overvoltage.
- Supports output protection for overvoltage, overcurrent, short circuit, and overtemperature.
- I2C communication for control, online upgrade, and monitoring.
- AC: UL, TUV, CB, CE, CCC, BSMI, and BIS certification available.
- 240 HVDC: UL, TUV, CCC, CB, and CE certification available.
- 80 Plus platinum energy efficiency certification.
- IEC 60950-1, EN 60950-1, UL 60950-1, GB 4943.1, IEC 62368-1
- RoHS6 compliant.

Application Scenario

Servers


 Copyright © XFUSION INTERNATIONAL PTE. LTD.

3 Product Structure Overview

3.1 Structural Dimensions
3.2 External Ports
3.3 LED Indicator

3.1 Structural Dimensions

Depth x Width x Height: 183.0 mm × 68.0 mm × 40.3 mm

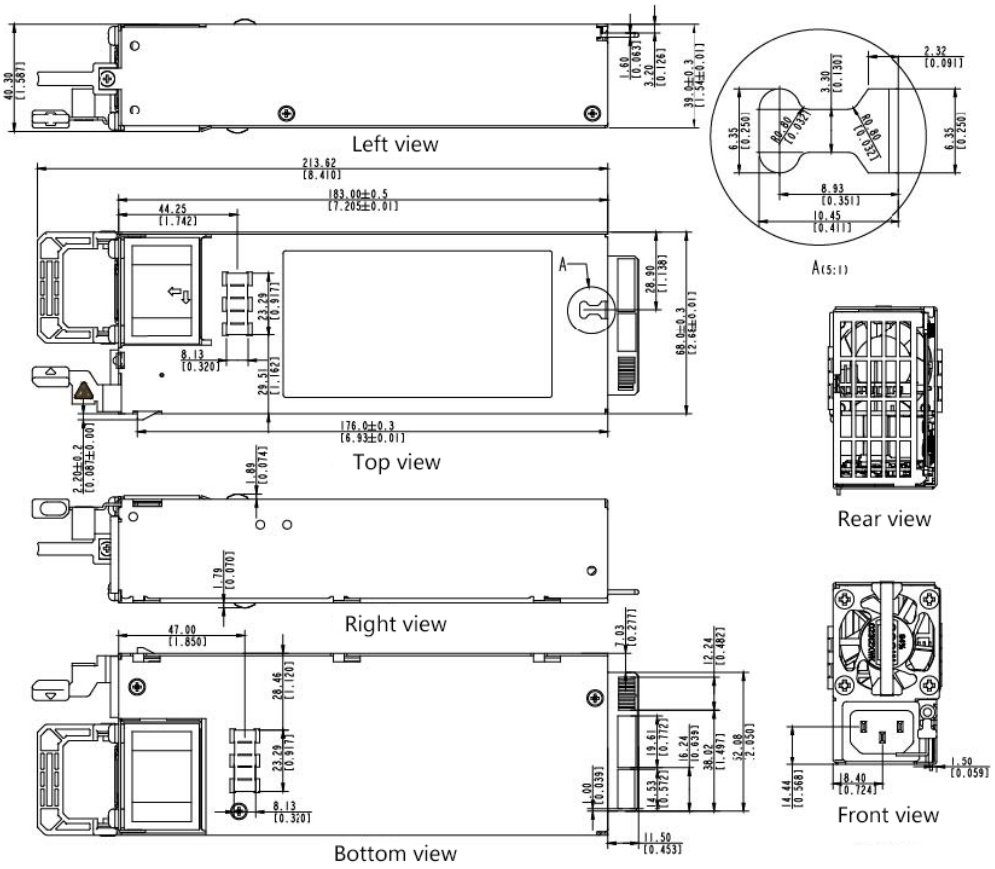

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

3.2 External Ports

Figure 3-1 Output port (top view)


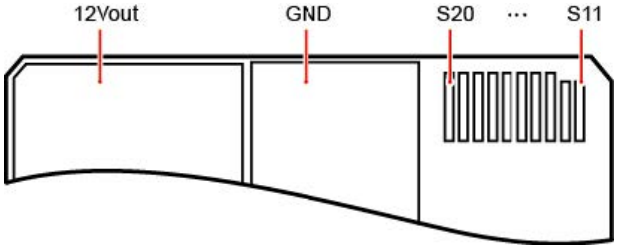


Figure 3-2 Output port (bottom view)

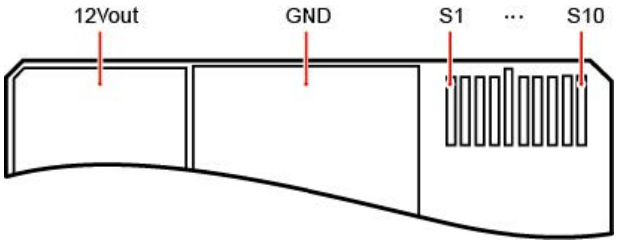

Pin	Name	Description
P1-P6, P21-P28	V12	PSU 12 V main output
P7-P20	RTN	PSU output GND
S20	OPOK	Signal for indicating whether the main output is normal
S19	IPOK	Signal for indicating whether the input is normal
S18	IPOK Link	Signal for indicating whether the input of the redundant PSU is normal
S17	SMART_ON	Signal for waking up the cold standby power mode
S16	SHLFBB_SF1	Reserved
S15	INSTALLED54#	Reserved
S14	IP PRESENT	SV12 control signal
S13	PSON12V#	MV12 remote on/off control signal

Copyright © XFUSION INTERNATIONAL PTE. LTD.

Pin	Name	Description
S12	INSTALLED#	PSU installation signal
S11	PRESENT#	PSU presence signal
S10	I-MON	Current sharing signal
S9	EFUSEV	System E-Fuse voltage
S8	CYC_PWR#	Power supply cycle power signal
S7	PS_INTERRUPT#	PSU alarm interruption signal
S6	SDA	I2C data cable
S5	I2C Sig GND	I2C signal ground
S4	SCL	I2C Serial Clock Line
S3	ADD2	Address cable 2
S2	ADD1	Address cable 1
S1	ADD0	Address cable 0

3.3 LED Indicator

Indicator	Status	Description
Power status indicator	Steady green	The input and mains MV12 output are normal.
	Blinking green at 1 Hz	● The input is normal, and the PSU shuts down MV12 output due to the INSTALLED# signal. ● The input is normal. The PSU enters MV6 mode because the PSON12V# signal is at high level. After the PSU enters MV12 mode due to the overcurrent in MV6 mode, the green indicator blinks at 1 Hz. ● Input undervoltage occurs. ● The standby PSU is in cold standby mode. ● The PSU enters deep sleep mode. ● In low power mode, the PSON12V# and IP PRESENT# signals are at low level and the PSU enters SV12 mode. After the PSU enters MV12 mode due to the overcurrent in SV12 mode, the green indicator blinks at 1 Hz.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Indicator	Status	Description
	Steady orange	The input is normal. There is no output due to overtemperature protection, output overcurrent/short circuit, output overvoltage, short-circuit protection, or component failure (excluding failure of all components) .
	Off	No input.
	Blinking green at 4 Hz	Online upgrade is in progress.

NOTE

- For normal startup, the green indicator should be on and should not blink. For normal poweroff, the power indicator should be off and should not be steady red or blinking red.
- Communication fault is not indicated by the indicator status.
- When the indicator is controlled by the main control unit, the indicator status depends on the main control unit command.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

4 Electrical Specifications

4.1 Environmental Characteristics
4.2 Input Characteristics
4.3 Output Characteristics
4.4 Efficiency Characteristics
4.5 Protection Characteristics

4.1 Environmental Characteristics

Parameter	Minimum Value	Typical Value	Maximum Value	Unit	Remarks
Operating temperature (T_A)	5	25	55	°C	• The PSU is able to start at –10°C (14°F) , but there is no requirements on the PSU performance. • When the temperature ranges from 55°C to 65°C (131°F to 149°F), the PSU can run reliably at half load for a long period of time.
Storage temperature	-40	25	85	°C	-
Relative humidity	5	-	95	%RH	Non-condensing. The PSU can work properly.
Altitude	-60	0	5000	m	5000 m (16, 404 ft) in CCC certification. When the PSU is not working, it can be placed at an altitude of 15, 000 m (49, 212 ft) .

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Parameter	Minimum Value	Typical Value	Maximum Value	Unit	Remarks
Atmospheric pressure	61	-	106	kPa	The PSU can run normally with the atmospheric pressure at an altitude of 4000 m (13, 123.36 ft) .
Low atmospheric pressure	-	-	4000	-	● Passed the low atmospheric pressure test at an altitude of 4000 m (13, 123.36 ft) and with rated input of 230 V AC. ● When the altitude ranges from 1800 m to 4000 m (5905.51 ft to 13, 123.36 ft) , the highest operating temperature decreases by 1°C (1.8°F) for every increase of 220 m (721.78 ft) .

4.2 Input Characteristics

Parameter	Minimum Value	Typical Value	Maximum Value	Unit	Remarks
AC input system	-	Single-phase AC input and dual-live wire input	-	-	Supports 110 V AC single-phase input and 220 V AC dual-live wire input.
AC input voltage (V_{in})	90	-	264	V	-
Rated AC input voltage	100	230	240	V	-
AC input frequency	180	240	300	V	The PSU can still work normally even in the case of reverse polarity wiring.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Parameter	Minimum Value	Typical Value	Maximum Value	Unit	Remarks
HVDC input voltage	47	50/60	63	Hz	-
THDi (MV12 output mode)	-	-	-	%	No requirement at below 10% load.
	-	-	20		T_A = 25°C (77°F), V_{in} = 208 V AC (60 Hz) or 230 V AC (50 Hz), and 10% load.
	-	-	10		T_A = 25°C (77°F), V_{in} = 208 V AC (60 Hz) or 230 V AC (50 Hz), and 20% load.
	-	-	5		T_A = 25°C (77°F), V_{in} = 208 V AC (60 Hz) or 230 V AC (50 Hz), and ≥ 30%.
THDv	-	-	10	%	THDv ≤ 10%: The PSU can work properly.
Power factor (MV12)	0.94	-	-	-	T_A = 25°C (77°F), V_{in} = 208 V AC (60 Hz), 230 V AC(50 Hz) or 240 V AC(60 Hz), and 10% load.
	0.96	-	-	-	T_A = 25°C (77°F), V_{in} = 208 V AC (60 Hz), 230 V AC(50 Hz) or 240 V AC(60 Hz), and 20% load.
	0.98	-	-	-	T_A = 25°C (77°F), V_{in} = 208 V AC (60 Hz), 230 V AC(50 Hz) or 240 V AC(60 Hz), and 50% load.
	0.99	-	-	-	T_A = 25°C (77°F), V_{in} = 208 V AC (60 Hz), 230 V AC(50 Hz) or 240 V AC(60 Hz), and 100% load.
Maximum AC input current (RMS)	-	-	10	A	V_{in} = 100 V AC, rated load output.
Maximum HVDC input current (RMS)	-	-	5	A	V_{in} = 240 V DC, rated load output.
AC input DC bias	-	-	50	mA	Rated input, full-range output (take the average value in the parallel test) .

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Parameter	Minimum Value	Typical Value	Maximum Value	Unit	Remarks
Input inrush current	-	-	30	A	ETSI 300 132-3 compliant.
Standby power consumption	-	-	1	W	• T_A = 25°C (77°F), V_{in} = 115 V AC/230 V AC/ 240 V DC • The fan and output are shut down. The PSU works in deep sleep mode.
	-	-	5		• T_A = 25°C (77°F), V_{in} = 115 V AC/230 V AC/ 240 V DC • The fan works at the lowest rotational speed, and the output is 0 A. The standby PSU works in cold standby and active/standby modes.
Harmonic current	-	-	-	-	Meets the test requirements of class A equipment (T_A = 25°C or 77°F).
C32 trip prevention characteristic	-	-	-	-	If an internal fault occurs in the PSU, the upstream C32 circuit breaker is not allowed to trip.

NOTE

- The PSU can withstand an input voltage of 318 V AC for 48 hours (non-working state is acceptable).
- When testing the maximum input current, ensure that the voltage of the power input port meets the requirement and the output power is 900 W.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

4.3 Output Characteristics

Parameter	Output	Minimum Value	Typical Value	Maximum Value	Unit	Remarks
Number of outputs	-	-	-	1	-	There is a single output. The output mode can be MV12, SV12 or MV6. ● When the PSON12V# is at high level, the PSU enters MV6 output mode. ● When the PSON12V# is at low level, the PSU enters MV12 output mode. When the PSON12V# signal is at low level, the PSUs in the IP PRESENT# signal present the following working states: – When the IP PRESENT# signal is at high level, the PSU is still in MV12 output mode. – When the IP PRESENT# signal is at low level, the PSU enters SV12 output mode. The PSU indicator blinks green at 1 Hz. – When the IP PRESENT# signal detection validity time is greater than or equal to 25 ms, the switching delay is less than or equal to 200 ms (including the detection time).
Output power	MV12	-	-	900	W	V_{in} = 90 V–264 V AC or 180V–300 V DC
	MV6	-	-	60		V_{in} = 90 V–264 V AC or 180V–300 V DC
Output voltage setpoint	MV12/ SV12	12.27	12.30	12.33	V	T_A = 25°C (77°F), rated input (230 V AC, 240 V DC), I_{out} = 3 A

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Parameter	Output	Minimum Value	Typical Value	Maximum Value	Unit	Remarks
	MV6	7.30	7.60	7.90		
Output voltage	MV12/SV12	11.7	12.3	12.6	V	From 0% load to full load; area I.
	MV6	6.4	7.6	8.2		
Output current	MV12	3	-	75	A	V_{in} = 90 V–264 V AC or 180 V–300 V DC, maximum power ≤ 900 W
	MV6	1	-	10		-
	SV12	1	-	45		-
Source regulation rate	-	-1	-	1	%	-
Ripple and noise (peak to peak)	MV12	-	-	120	mV	Before the test, add a minimum capacitive load of 540 µF and a minimum load of 3 A at the output end, connect a 10 µF capacitor and a 0.1 µF ceramic capacitor in parallel, and set the oscilloscope bandwidth to 20 MHz. Put the ripple probe behind the minimum capacitive load.
	SV12	-	-	360	mV	Before the test, connect a 10 µF capacitor and a 0.1 µF ceramic capacitor in parallel at the output end, and set the oscilloscope bandwidth to 20 MHz. Add a minimum load of 1 A and tested with the minimum capacitive load 270 µF.
	MV6	-	-	360	mV	Before the test, connect a 10 µF capacitor and a 0.1 µF ceramic capacitor in parallel at the output end, and set the oscilloscope bandwidth to 20 MHz. Add a minimum load of 1 A and tested with the minimum capacitive load 270 µF.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Parameter	Output	Minimum Value	Typical Value	Maximum Value	Unit	Remarks
Dynamic	MV12	11.6	-	12.6	V	Current change rate: 0.5A/μs, T = 10ms, load: 25%–50%–25% or 50%–75%–50%, Tested with the minimum capacitive load 540 μF.
		11.4	-	12.8	V	Current change rate: 0.5A/μs, T = 10ms, load: 50%–100%–50%, Tested with the minimum capacitive load 540 μF.
	MV6	6.0	-	8.2	V	Current change rate: 0.5A/μs, T = 10ms, load: 5%–100%, Tested with the minimum capacitive load 270 μF.
	SV12	11.4	-	12.6	V	Current change rate: 0.5A/μs, T = 10ms, load: 25%–50%–25% or 50%–75%–50%, Tested with the minimum capacitive load 540 μF.
Transient impact power overshoot	MV12	11.4	-	12.8	V	Current change rate: 0.5A/μs, a pulse period 1s–10ms–1s, load: 65%–130%–65%, Tested with the minimum capacitive load.
Overshoot at turn-on	MV12	-5	-	5	%	-
Temperature coefficient	-	-0.02	-	0.02	%/°C	Rated output voltage, rated output current and full range of T_A.
Current share error[a]	MV12	-5	-	5	%	50%–100% load (rated load of a single PSU in parallel mode).
	MV12	-10	-	10	%	200 W–50% load (rated load of a single PSU in parallel mode).
	MV12	-	-	-	%	It is not required when the load is less than 200 W.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Parameter	Output	Minimum Value	Typical Value	Maximum Value	Unit	Remarks
Full load current share bus voltage	MV12	5.7	6.0	6.3	V	$I_{MON} = \frac{6}{75} \times I_{OUT}$ ● I_{MON}: current share bus voltage (unit: V) ● I_{out}: output current (unit: A) ● 6/75: coefficient of proportionality
Capacitive load	MV12	540	-	22000	μF	-
	SV12	270	-	1000	μF	
	MV6	270	-	1000	μF	
Hot swap	MV12	11.4	-	12.6	V	The backplane voltage cannot exceed the dynamic requirements for the PSU during the swap. In MV12 mode, the bus voltage must be greater than or equal to 11.4 V. The bus voltage cannot be greater than or equal to 11 V and the time of the voltage below 11.4 V cannot exceed 100 μs. ● Hot swap does not need to be tested in the case of the removal of a PSU in power-on state. ● In a parallel mode with the 12 V output, test the PSU with the minimum capacitive load.
	MV6	6.0	-	8.2	V	

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Parameter	Output	Minimum Value	Typical Value	Maximum Value	Unit	Remarks
a: ● Active current share is used. ● 1+1 parallel system: When the total load is less than or equal to the rated load of a single PSU, the current sharing formula is [I – (I1 + I2)/2]/(I1 + I2) x 100%. When the total load is greater than the rated load of a single PSU, the current sharing formula is [I – (I1 + I2)/2]/IN x 100%. (IN indicates the rated load of a single PSU.) ● In a 2+2 parallel system, the current sharing formula is as follows on the premise that the 1+1 current sharing requirements are met: Max [Max (I, I2, I3, I4) – Ave (I1, I2, I3, I4), Ave (I1, I2, I3, I4) – Min (I1, I2, I3, I4)]/IN x 100%. (IN indicates the rated load of a single PSU.)						

4.4 Efficiency Characteristics

Parameter	Output	Minimum Value	Typical Value	Maximum Value	Unit	Remarks
Efficiency	MV12	87.0	-	-	%	V_{in} = 230 V AC, P_{out} = 90 W, T_A = 25°C (77°F), without a fan.
		91.0	-	-		V_{in} = 230 V AC, P_{out} = 180 W, T_A = 25°C (77°F), without a fan.
		94.0	-	-		V_{in} = 230 V AC, P_{out} = 450 W, T_A = 25°C (77°F), without a fan.
		91.0	-	-		V_{in} = 230 V AC, P_{out} = 900 W, T_A = 25°C (77°F), without a fan.
		87.0	-	-		V_{in} = 115 V AC/240 V DC, P_{out} = 200 W, T_A = 25°C (77°F), without a fan.
		91.0	-	-		V_{in} = 115 V AC/240 V DC, P_{out} = 500 W, T_A = 25°C (77°F), without a fan.
		89.0	-	-		V_{in} = 115 V AC/240 V DC, P_{out} = 900 W, T_A = 25°C (77°F), without a fan.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Parameter	Output	Minimum Value	Typical Value	Maximum Value	Unit	Remarks
	MV6	70.0	-	-		V_{in} = 230 V AC/240 V DC, I_{out} = 8A, T_A = 25°C (77°F), without a fan.

4.5 Protection Characteristics

AC Input Protection Characteristics

Parameter	Minimum Value	Typical Value	Maximum Value	Unit	Remarks
AC input overvoltage protection threshold	280	-	-	V	Self-recovery.
AC input overvoltage recovery threshold	275	-	-	V	Hysteresis ≥ 5 V.
AC input undervoltage protection threshold	-	-	85	V	Self-recovery.
AC input undervoltage recovery threshold	-	-	90	V	Hysteresis ≥ 5 V (During recovery, the PSU cannot start in the hysteresis range.)
AC input overcurrent or short circuit protection	-	-	-	-	Use a fast-blow fuse.
PFC overvoltage protection	-			-	PFC overvoltage does not damage the bus capacitor (excluding damage caused by input overvoltage).

NOTE

- If input overvoltage or undervoltage protection is triggered, both MV12 and MV6 are shut down. The input voltage threshold that causes MV12 to shut down is the same as the input voltage threshold that causes MV6 to shut down.
- If input overvoltage or undervoltage is rectified, both MV12 and MV6 recover. The input voltage threshold that causes MV12 to recover is the same as the input voltage threshold that causes MV6 to recover.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

HVCD Input Protection Characteristics

Parameter	Minimum Value	Typical Value	Maximum Value	Unit	Remarks
HVDC input overvoltage protection threshold	310	-	-	V	Self-recovery.
HVDC input overvoltage recovery threshold	305	-	-	V	Hysteresis ≥ 5 V.
HVDC input undervoltage protection threshold	-	-	175	V	Self-recovery.
HVDC input undervoltage recovery threshold	-	-	180	V	Hysteresis ≥ 5 V (During recovery, the PSU cannot start in the hysteresis range.)
PFC overvoltage protection	-			-	PFC overvoltage does not damage the bus capacitor (excluding damage caused by input overvoltage).

NOTE

- If input overvoltage or undervoltage protection is triggered, both MV12 and MV6 are shut down. The input voltage threshold that causes MV12 to shut down is the same as the input voltage threshold that causes MV6 to shut down.
- If input overvoltage or undervoltage is rectified, both MV12 and MV6 recover. The input voltage threshold that causes MV12 to recover is the same as the input voltage threshold that causes MV6 to recover.

Output protection

Parameter	Output	Minimum Value	Typical Value	Maximum Value	Unit	Remarks
Output overvolta	MV12	13	-	15	V	Latch off.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Parameter	Output	Minimum Value	Typical Value	Maximum Value	Unit	Remarks
ge protection	MV6	13	-	15	V	Latch off. In MV6 mode, if the PSU loop is detected to be open, protection is triggered directly. (Reaching the MV6 overvoltage protection threshold is not required.)
	SV12	13	-	15	V	Latch off.
Output overcurrent protection	MV12	110	-	130	%	Response time is greater than or equal to 100ms, Latch off.
		130	-	150		Response time is greater than or equal to 4ms, Latch off.
	MV6	11	13	15	A	Response time is greater than or equal to 100ms. If output overcurrent occurs in MV6 mode, the PSU output voltage is output in MV12 mode (no system signal is required). The PSU can enter MV6 mode only after the PSON12V# signal changes from high level to low level, and then from low level back to high level.
	SV12	50	-	-	A	Response time is greater than or equal to 100ms. The PSU enters MV12 mode after the overcurrent occurs in SV12 mode. The green indicator blinks at 1 Hz.
Output short circuit protection	MV12	150	-	-	%	Response time is less than or equal to 500 μs maximum. Latch off.
	MV6	15	-	-	A	Response time is less than or equal to 500 μs maximum. Latch off.
	SV12	-	-	-	A	Latch off.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Parameter	Output	Minimum Value	Typical Value	Maximum Value	Unit	Remarks
Overtemperature protection	-	55	-	-	°C	● In the normal input range, the PSU can be protected against overtemperature and shut down only when the ambient temperature is higher than 55°C (131°F). Overtemperature protection can be automatically restored. The hysteresis for restoration must be greater than 5°C (41°F). ● The environment protection threshold of the PSU must be set to 70°C (158°F) or higher. ● Overtemperature protection needs to be triggered for high temperature of the internal components caused by fan heat dissipation failure. ● If the PSU experiences overtemperature in MV12 or SV12 mode and in the scenario of system service load, it will output based on MV6 mode (even if PSON12V# is still at low level). When the temperature restores and the PSON12V# signal is at low level, the PSU can enter MV12 or SV12 mode. ● If the PSU experiences overtemperature in MV6 mode, it will shut down output. When the temperature of the components inside the PSU restores, the PSU restores to MV6 mode first (even if PSON12V# is still at low level), and then restores to MV12 mode if the PSON12V# signal is at low level. The hysteresis for restoration must be greater than 5°C (41°F).

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

NOTE

- MV12/MV6/SV12 overvoltage protection unlock mode (unlocked if any of the following conditions is met):
  - AC input is recovered after it is disconnected for 15s, and the PSU can work normally. (In a parallel system, if output overcurrent occurs on one PSU, recover the power after the AC input is disconnected. The PSU can be unlocked within 2s.)
  - INSTALLED# changes from low level to high level.
  - PSON12V# changes from high level to low level.
  - IP PRESENT signal changes from low level to high level twice within 30s.
- MV12 output overcurrent/short circuit protection unlock mode (unlocked if any of the following conditions is met):
  - AC input is recovered after it is disconnected for 15s, and the PSU can work normally. (In a parallel system, if output overcurrent occurs on one PSU, recover the power after the AC input is disconnected. The PSU can be unlocked within 2s.)
  - INSTALLED# changes from low level to high level.
  - PSON12V# changes from high level to low level. After PSON12V# changes to high level for more than 500 ms and then changes to low level, the PSU can be unlocked (MV12 output overcurrent).
  - IP PRESENT signal changes from low level to high level twice within 30s.
- SV12 output overcurrent/short circuit protection unlock mode (unlocked if any of the following conditions is met):
  - AC input is recovered after it is disconnected for 15s, and the PSU can work normally.
  - INSTALLED# changes from low level to high level.
  - If SV12 triggers overcurrent protection but does not cause PSU shutdown, IP PRESENT signal changes from low level to high level once to unlock the PSU. If SV12 triggers overcurrent protection and causes PSU shutdown, IP PRESENT signal changes from low level to high level twice within 30s. After IP PRESENT signal changes to low level for more than 500 ms and then changes to high level, the PSU can be unlocked (SV12 output overcurrent).
- MV6 output overcurrent/short circuit protection unlock mode (unlocked if any of the following conditions is met):
  - AC input is recovered after it is disconnected for 15s, and the PSU can work normally.
  - INSTALLED# changes from low level to high level.
  - PSON12V# changes from high level to low level.
- After the PSU triggers fault protection, the MCU and I2C in the PSU can work properly.
- If the output exceeds the rated load, the output regulated voltage precision can be ignored.
- When the PSU output mode is switched from MV12 to MV6, all loads connected to MV12 will passively exit before the output voltage drops to 9 V. Then, the PSU only connects to MV6 loads.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

5 Parallel Operation

Current Share Design Requirements

- Supports 1+1, 2+2, or 3+3 mode. Current sharing only in MV12 mode.
- The total load at startup in parallel operation scenarios should be less than the rated load of a single PSU.
- When PSUs work in 1+1 or 2+2 mode, if one of the PSUs works in MV6 mode and other PSUs work in MV12 mode, the PSUs should work properly without affecting each other.
- In scenarios where different PSUs are not installed together, the I-MON signals of the two PSUs should not affect the normal operation of the PSUs when they are directly connected.
- Current sharing imbalance only in the normal temperature condition.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

6 Hot Swap Requirements

Hot swapping is the process of inserting the PSU to and extracting another PSU from a power system. The PSU should meet hot-swapping specifications.

The PSU can be hot swapped by the following methods:

- PSU hot swap without AC power applied (The PSU does not work before the insertion or extraction.)
  - Extraction: The AC power is disconnected from the PSU before the PSU is extracted from the system.
  - Insertion: The PSU is inserted into the system without power applied. Then, power is applied after the insertion.
- PSU hot swap through the system processor
  - Extraction: The system processor removes the PSU by turning off the PSON12V# signal.
  - Insertion: After a PSU is inserted into the system, the system processor queries the system status and turns on the PSON12V# signal to enable the PSU to work in main route operation mode.
- PSU hot swap with AC power applied (The AC/240HVDC is valid before being removed and inserted.)
  - Extraction: The PSU is removed from the system with power on.
  - Insertion: The PSU starts to work immediately after it is inserted into the system.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

7 Energy Saving Feature

7.1 Active/Standby (Hot Standby) Power Supply

7.2 Active/Standby N+R Load Mode

7.3 Deep Sleep Function

7.4 Cold Standby Energy Saving Function (Reserved)

7.1 Active/Standby (Hot Standby) Power Supply

If PSUs work in parallel, the system sets the bit 7 of the CEh (PS_CONTROL) to 1, and the output voltage of the standby PSU is set to standby voltage by running the **VOUT_COMMAND (21h)** command. The output voltage of the standby PSU goes down, the PSU exits current share. The PSU with an output setting voltage of 12.3 V is the active PSU (only MV12 supports hot standby).

Table 7-1 Active/Standby power supply characteristics

Parameter	Minimum Value	Typical Value	Maximum Value	Unit	Remarks
12 V output voltage of the standby PSU	-	12.05	-	V	T_A = 25°C (77°F)

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Parameter	Minimum Value	Typical Value	Maximum Value	Unit	Remarks
No-load power consumption of the standby PSU	-	-	5	W	● 1 + 1 power supply scenario: For the active/standby power supply with rated input of 115 V AC/230 V AC/240 V DC (AC + AC, AC + HVDC, HVDC + HVDC), the total input power is less than 75% of the rated output power of a single PSU and the input power consumption of each standby PSU is lower less than 5 W (when the standby PSU has no load). ● 2 + 2 power supply scenario: For the active/standby power supply with AC + AC, AC + HVDC, and HVDC + HVDC, the total input power is less than 75% of the rated output power of two PSUs and the input power consumption of each standby PSU is lower less than 5 W (when the standby PSU has no load).

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Parameter	Minimum Value	Typical Value	Maximum Value	Unit	Remarks
Busbar voltage in fault mode	11.4	-	-	V	● In 1 + 1 active/standby power supply scenarios (AC + AC, AC + HVDC, or HVDC + HVDC), if one of the PSUs powers off and experiences a fault (such as input power failure, hot swap, input undervoltage, input overvoltage, fan fault, overtemperature, or output overvoltage), the output voltage is more than 11.4 V, and the time when the voltage is lower than 11.4 V but not lower than 11 V cannot exceed 100 µs. (Excluding the scenario in which a short circuit occurs before ORing-FET) In a parallel scenario, the 12 V output is connected with a 540 µF capacitor. ● 2 + 2 active/standby power supply scenario (AC + AC, AC + HVDC, or HVDC + HVDC): The output voltage is more than 11.4 V, and the time when the voltage is lower than 11.4 V but not lower than 11 V cannot exceed 100 µs. – One power input fails (2 + 2 backup, one power input for two PSUs). – One of the PSUs experienced a fault (such as input undervoltage, input overvoltage, fan fault, overtemperature, output overvoltage, or hot swap). **NOTE** ● In a parallel scenario, the 12 V output is connected with a 1500 µF capacitor. ● In the scenario of 2+2 current share, the total load should be less than or equal to 190% of the rated load power of a single PSU. In the scenario of active/standby mode, the total load should be less than or equal to 140% of the rated load of a single PSU.

7.2 Active/Standby N+R Load Mode

In 1+1 mode, PSUs work in active/standby N+R mode. When the total load is less than or equal to 80% of the rated load of a single PSU, the standby PSU does not

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

load in stable state. When the total load is 80% to 100% of the rated load of a single PSU, the load rate of the active PSU to the standby PSU does not exceed 6:1 in stable state.

Table 7-2 N+R power supply specifications

Parameter	Minimum Value	Typical Value	Maximum Value	Unit	Remarks
Output current for active/standby switchover	-	-	20 ms @150%	%	● In 1+1 scenario, the input voltage of the active PSU is 220 V/50 Hz, and that of the standby PSU is 230 V/50 Hz. ● The total load is between 50% and 100% of the load of a single PSU.
	-	-	20 ms @150%	%	
Output dynamics	11.4	-	13.3	V	● When the load rate ranges from 80% to 100% and the switchover of active/standby PSUs occurs, the output voltage is allowed to drop at the μs level (the time when the voltage is greater than 11 V cannot be less than 1s), and the upper threshold of output voltage cannot exceed 13.3 V. ● The input voltage of the active PSU is 220 V/50 Hz, and that of the standby PSU is 230 V/50 Hz.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

NOTE

- Provides a software interface for the system to query whether the N+R active/standby feature is supported.
- PS_CONTROL (0xCEh) bit 14 = 1 indicates that the N+R feature is supported.
- PS_CONTROL (0xCEh) bit 14 = 1 indicates that the N+R feature is supported.
- After the PSU enters the standby mode, it exits the standby mode only when one of the following occurs:
- The system clears PS_CONTROL bit 7 of 0xCEh.
- The single-chip microcomputer of the PSU powers off and then restarts.
- A PSU communication fault occurs.
- The output load exceeds the load capability of the standby PSU when a fault occurs (the load of the standby PSU exceeds 50% of the rated load).
- The load of the active PSU exceeds 100%.
- If the active PSU is faulty (excluding in the case of the removal of a PSU with power on and a short circuit before outputting ORing-FET), wake up the standby PSU in a timely manner (false wake-up is allowed) and the output voltage is allowed to drop at the μs level (the time when the voltage ranges from 11 V to 11.4 V cannot exceed 100 μs).
- Restart requirements of a standby PSU (FF feature): The standby PSU restarts after the input power is off. If the DSP is not powered off, the status of the standby PSU is recorded. After the standby PSU starts, restart it at the standby PSU voltage. (The input voltage of the active PSU is 220 V/50 Hz, and that of the standby PSU is 230 V/50 Hz.)
- After the program is updated on the standby PSU, the standby PSU is removed, the power communication fault is rectified or the power module of the standby PSU is replaced, the active/standby information of the standby PSU is initialized (the active PSU is restored by default), and the system resets the active/standby information.
- Any single fault cannot cause the PSU output to exceed the output overvoltage threshold.
- Isolation function (excluding the invalid short circuit): The overvoltage, overcurrent/short circuit of output, and short-circuited modules can shut down the output inside the PSUs so that the PSUs must be isolated reliably if they fail. When a single PSU fails, the overshoot (excluding internal short circuit and overvoltage) and drop of the system bus voltage cannot be less than 11.4 V. When the load rate is more than 80%, the time when the voltage is greater than 11 V and less than 11.4 V should less than 100 μs.

7.3 Deep Sleep Function

The PSU enters deep sleep mode if bit B of PS_CONTROL (CEh) is set to 1. The deep sleep function is supported in both MV12 and MV6 modes.

NOTE

When PSUs are connected in parallel, if one PSU enters deep sleep mode and the system communicates with it, the primary side information including input voltage, current, and power is reported as 0, and secondary side information is reported based on the actual situation (except that the output voltage and current are reported as 0).

Requirement

In deep sleep mode, the PSU input power is less than 1 W.

Acceptance criteria

- The main power is shut down and the 12 V bushas no output power.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

- The PFC is shut down.
- The fan obtains power from the 12 V bus.
- The power control function can be obtained through the 12 V bus.
- The output of all converters can be controlled online and restored to normal.

In a parallel system, the PSU is not allowed to enter deep sleep mode unless all of the following occur:

- The system sets the deep sleep control register to 1.
- EFUSEV is less than or equal to 0.8 V.

The PSU must be able to restore output of converters when any of the following occurs:

- The bus voltage is less than 5.7 V.
- The deep sleep control register is set to 0.
- EFUSEV is greater than 1.0 V.

7.4 Cold Standby Energy Saving Function (Reserved)

In a 1+1 redundancy system, the cold standby mode is supported when the output mode is MV12.

The PSU can enter cold standby mode if all of the following conditions are met:

- The load is less than 70% rated load of a single PSU.
- The system sends a D0h 0x01 command to set one of the PSUs as the active PSU (SMART_ON changes to high level).
- The system sends D0h 0x02/0x03/0x04 to the other PSU and detects that SMART_ON is high.

The cold standby PSU exits cold standby mode if any of the following conditions is met:

- The system sends the D0h 0x00 command.
- The single-chip microcomputer of the PSU restarts.
- The I2C communication of the PSU is abnormal.
- The MV12/SV12 output of the active PSU encounters a fault, such as input power failure, input overvoltage/ undervoltage, output overvoltage/overcurrent/ undervoltage (< 11.8 V), overtemperature, and fan fault, which causes SMART_ON to change to low level.
- The PSON12V# signal changes from low level to high level, and the INSTALLED# signal changes from low level to high level.
- The load power is greater than the maximum power supported by cold standby.

The active PSU exits cold standby mode if any of the following conditions is met:

- The system sends the D0h 0x00 command.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

- The single-chip microcomputer of the PSU restarts.
- The I2C communication of the PSU is abnormal.
- The 12 V output of the active PSU encounters a fault, such as input power failure, input overvoltage/ undervoltage, output overvoltage/overcurrent/ undervoltage (< 11.8 V), overtemperature, and fan fault.
- The PSON12V# signal changes from low level to high level, and the INSTALLED# signal changes from low level to high level.

Table 7-3 Power consumption of standby PSU in cold standby mode


Parameter	Min.	Typ.	Max.	Unit	Notes & Conditions
Power consumption of standby PSU	-	-	5	W	Input voltage: 115 V AC/230 V AC/240 V DC. In 1+1 scenario (AC+AC, AC+HVDC, HVDC+HVDC), the input power consumption of each standby PSU is lower than 5 W.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

8 Feature Curves


Conditions: T_A = 25°C (77°F) unless otherwise specified.

Figure 8-1 Efficiency curve, MV12

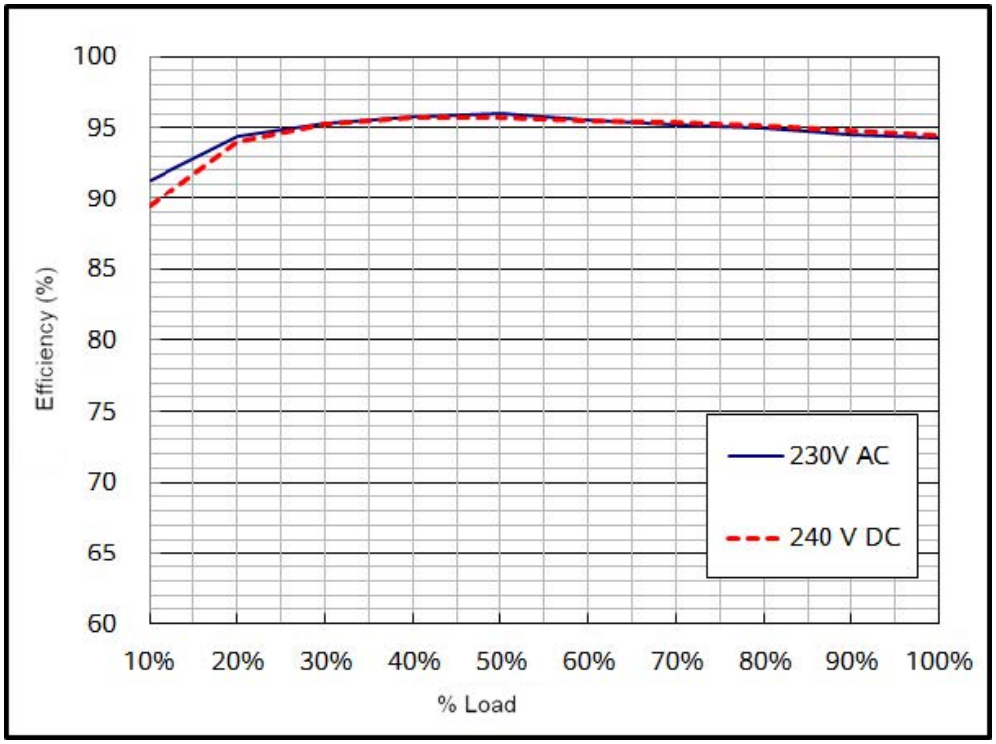

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 8-2 Power dissipation curve, MV12

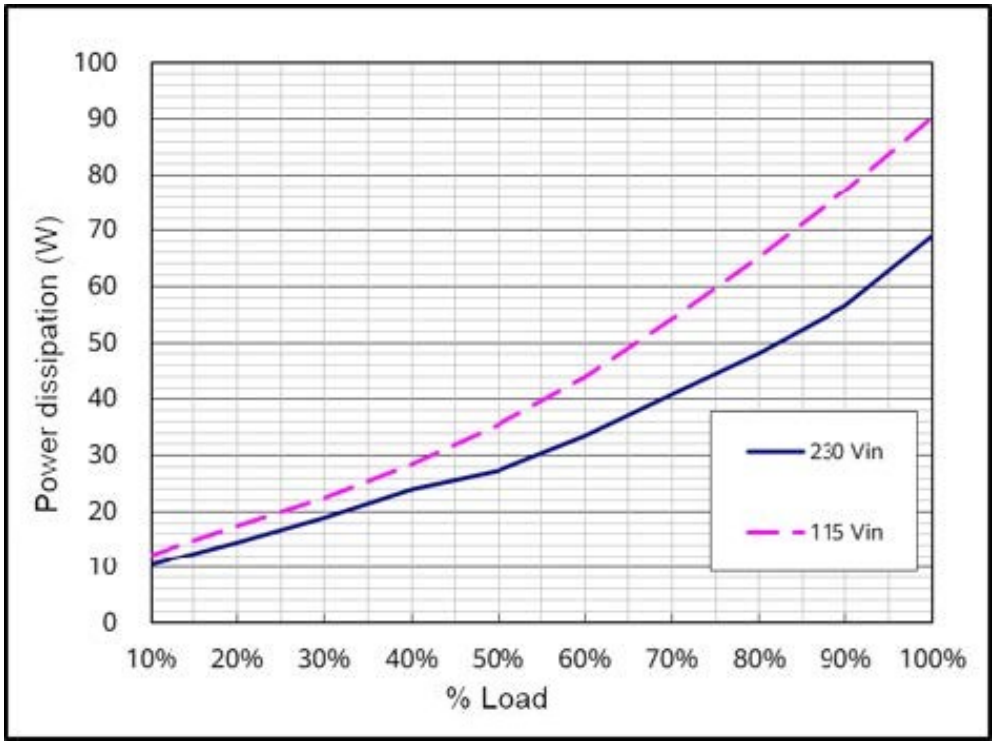


 Copyright © XFUSION INTERNATIONAL PTE. LTD.

9 Typical Waveforms

9.1 Turn-on/Turn-off
9.2 Output Voltage Dynamic Response
9.3 Output Voltage Ripple and Noise


9.1 Turn-on/Turn-off

Figure 9-1 Turn-on for AC input (T_A = 25°C (77°F), V_{in} = 220 V AC, MV12, 100% load)

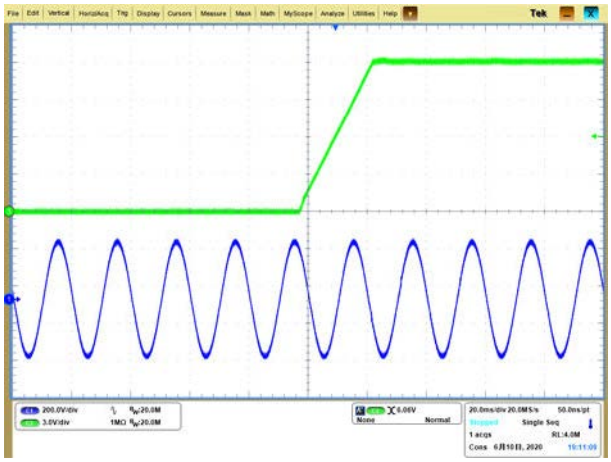


 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 9-2 Turn-off for AC input (T_A = 25°C (77°F), V_{in} = 220 V AC, MV12, 100% load)

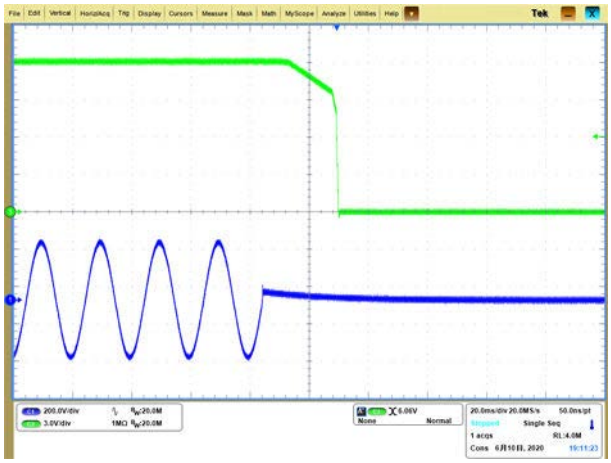

9.2 Output Voltage Dynamic Response

Figure 9-3 Output Voltage Dynamic Response (T_A = 25°C (77°F), V_{in} = 220 V AC, 25%–50%–25%, 0.5A/μs, T = 10 ms, MV12)

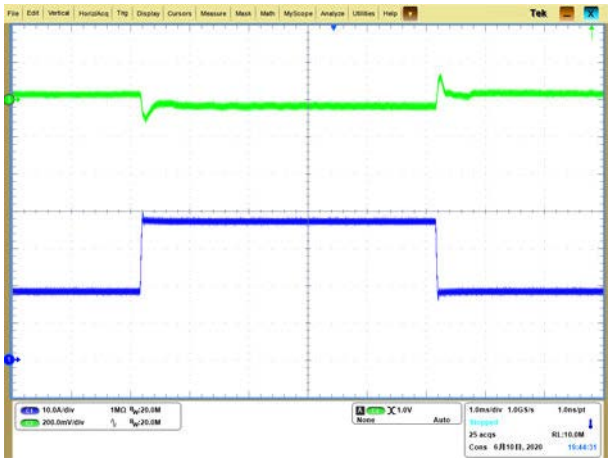

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 9-4 Output Voltage Dynamic Response (T_A = 25°C (77°F), V_{in} = 220 V AC, 50%–75%–50%, 0.5A/μs, T = 10 ms, MV12)

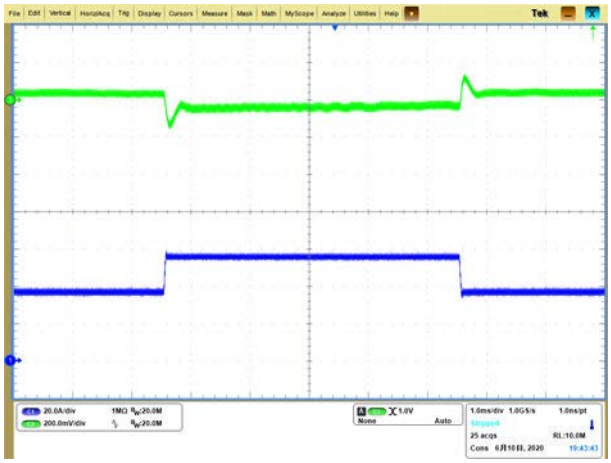


Figure 9-5 Output Voltage Dynamic Response (T_A = 25°C (77°F), V_{in} = 220 V AC, 100%–50%–100%, 0.5A/μs, T = 10 ms, MV12)


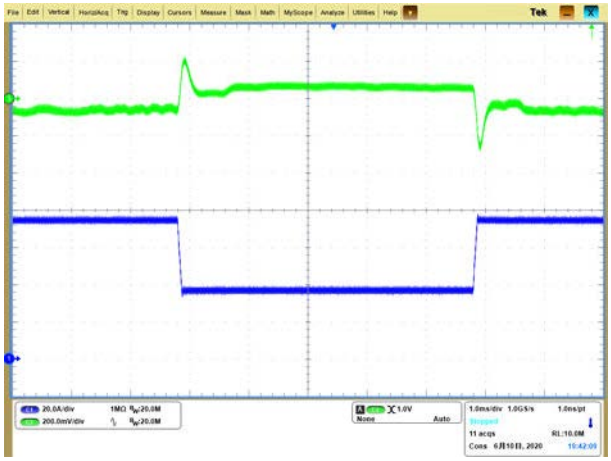



Figure 9-6 Output Voltage Dynamic Response (T_A = 25°C (77°F), V_{in} = 220 V AC, 65%–130%–65%, 0.5A/μs, T = 1 s–10 ms–1 s, MV12)

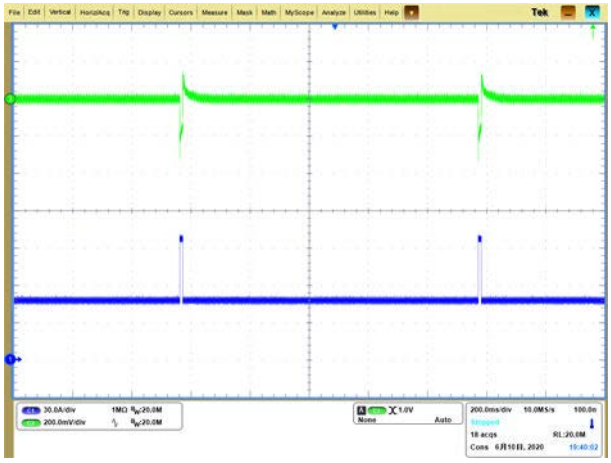

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

9.3 Output Voltage Ripple and Noise

Figure 9-7 Output Voltage Ripple and Noise (T_A = 25°C (77°F), V_{in} = 220 V AC, MV12, 100% load)

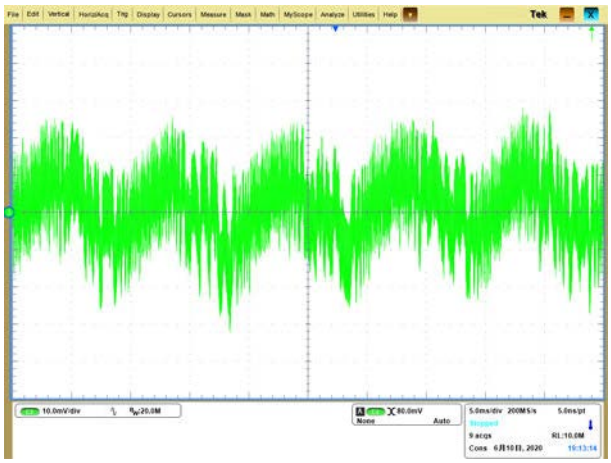

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

10 Control Signals

10.1 PSU Timing
10.2 ORing-FET
10.3 PSON12V#
10.4 PRESENT#
10.5 INSTALLED#
10.6 OPOK#
10.7 IPOK
10.8 IPOK LINK
10.9 IP PRESENT
10.10 CYC_PWR#
10.11 I-MON#
10.12 PS_INTERRUPT
10.13 EFUSEV
10.14 SMART_ON#

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

10.1 PSU Timing

Figure 10-1 PSU timing diagram

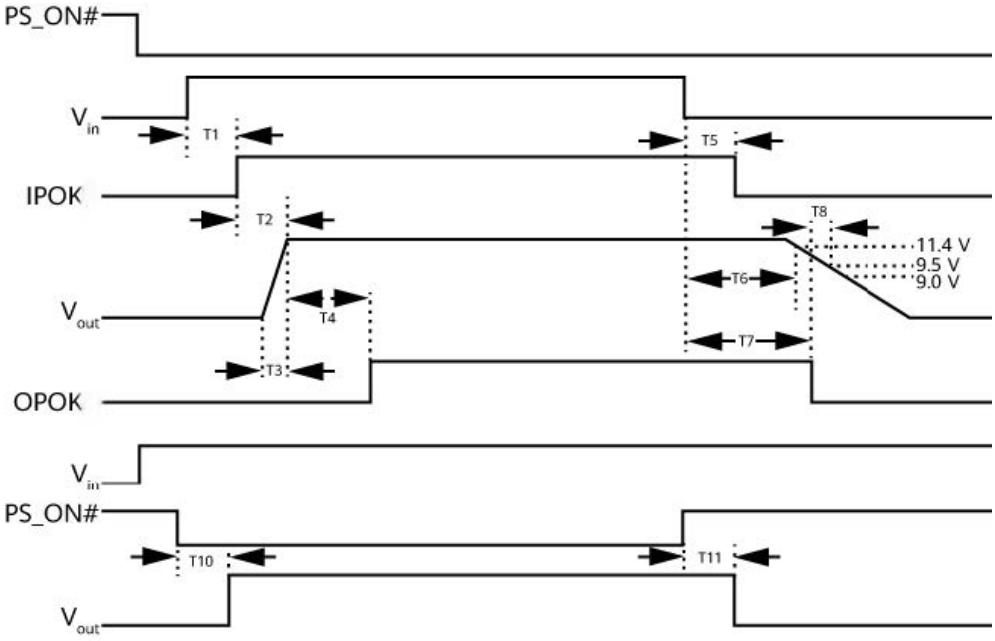


Table 10-1 Output PSU timing requirements

Mark	Description	Min.	Max.	Unit
T1	Time from AC/DC input to when IPOK is at high level	-	2000	ms
T2	Time from when IPOK is at high level to when MV12 output to 11.4 V (PSON12V# is at low level)	-	500	ms
T3	Time for MV6 output to increase from 10% to 90%	5	25	ms
	Time for MV12 output to increase from 10% to 90%	5	25	ms
T4	Delay time for the OPOK to take effect (when MV12/MV6 increases to 90% to when OPOK is at high level)	50	100	ms
T5	IPOK failure delay time (from input outage to low IPOK signal, circuit breaker disconnection not considered, full load test conditions)	-	4	ms
T6	Output hold-up time 1 (from input power failure during normal running to 11 V output, 80% load, DIP performance)	10	-	ms
T7	OPOK hold-up time (from AC power failure to low OPOK signal, 80% load)	10	-	ms

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Mark	Description	Min.	Max.	Unit
	Time from AC power failure to low OPOK signal, 40% load	20	-	ms
	Time from AC power failure to low OPOK signal, 25% load	30	-	ms
	Time from AC power failure to low OPOK signal, 12.5% load	40	-	ms
T8	Duration from the time when the OPOK signal falls to 1.43 V to the time when the 12 V bus voltage drops to 9.5 V	200	-	μs
T9	Output hold-up time 2 (the IPOK output power failure runs to 5.7 V that is less than 9.2 V after normal input power failure, and the power is 15 W with the power failure logs of T6.)	300	-	ms
T10	Delay time for the PSON12V# to change MV6 to MV12 mode (PSON12V# signal runs to 11.4 V.)	80	200	ms
	Time for MV6 OCP or MV12 OTP recovery (MV6 rises to 11 V.)	2.1	3.3	s
T12	Time for MV12 to drop to MV6 mode (with 24 W load)	80	200	ms

NOTE

- In case of input power failure, the PSU needs 10 ms to 120 ms to set I2C alarm position to 1 at more than half load, and the system needs 20 ms to 120 ms to set I2C alarm position to 1 at below half load (including half load).
- The storage NVDIMM power backup requirement is supported.
  - T8: This is required in the case of input power failure, input overvoltage/undervoltage, fan fault, overtemperature, and output undervoltage, and is not required in the case of OPOK alarms caused by output overcurrent/short-circuit and output overvoltage; if input power failure, undervoltage, or overvoltage occurs, the OPOK voltage should not rebound after dropping.
  - The PSU can report the OPOK fault in advance if the fault (such as input power failure, input overvoltage/undervoltage, fan fault, overtemperature, or output undervoltage) can be predicted by the PSU. In this case, the requirement that the output voltage must be less than 11.4 V does not have to be met.
- The test of T1 and T2 requires that the auxiliary power supply be completely powered off.
- Test T3 when the load is higher than the minimum value.
- PSON12V# reliability: If the PSON12V# signal is at high level for 25 ms or longer, the signal is valid.

10.2 ORing-FET


An ORing-FET failure isolation circuit needs to be added inside the PSU 12 V output. In the practical application scenario (1 + 1 and 2 + 2 redundancy) , if one PSU experiences an internal fault, it should exit automatically to prevent the bus voltage output from being abnormal.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

NOTE

- Capacitance at the MV12 input side: The equivalent capacitance should be greater than the PSU's minimum capacitive load 540 μF multiplied by N (N is the number of PSUs configured in the system) and less than the PSU's maximum capacitive load 22000 μF.
- The 12 V load should be greater than the minimum PSU load 3 A and less than the rated load of the PSU.

Figure 10-2 ORing-FET circuit

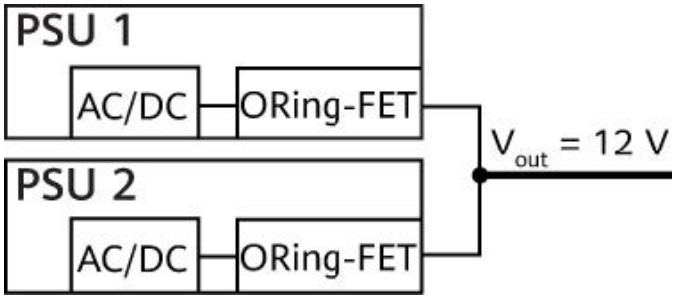


10.3 PSON12V#

The PSON12V# signal is an on/off signal that controls the PSU 12 V output remotely. If the PSON12V# signal is at low level and takes effect, the PSU 12 V enters MV12 output mode.

NOTE

- If the PSON12V# is at high level or left open, the PSU enters MV6 output mode.
- If PSON12V# is at high level for 25 ms or longer, PSON12V# is valid.

Figure 10-3 Interconnect diagram of the PSON12V# signal

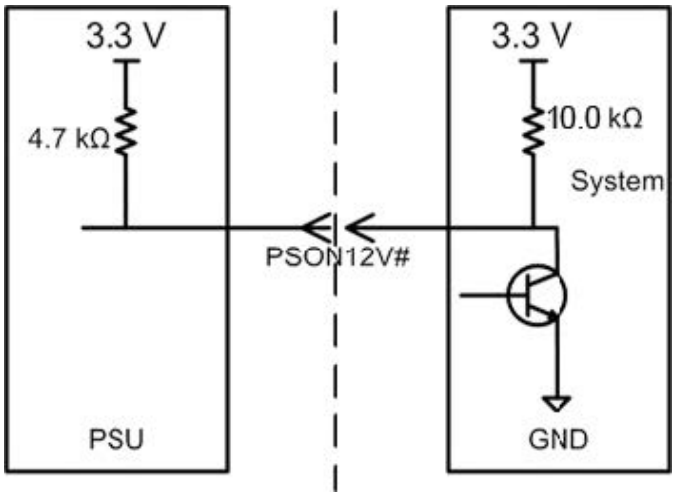

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Table 10-2 PSON12V# signal characteristics

Signal Characteristics	
Signal type	PSU side: This signal is pulled up to the 3.3 V auxiliary power source inside the PSU by a 4.7-kilohm resistor. System side: This signal is output by the CPLD over the drive circuit and pulled up to 3.3 V by a 10-kilohm resistor.
PSON12V# = Low	MV12 output mode
HPSON12V# = High/ Open	MV6 output mode

Table 10-3 PSON12V# output

PSON12V# Output	Min.	Max.
Low level voltage (main output enabled)	0V	0.8V
High level voltage (main output disabled)	2.000V	3.465V
Source current, PSON12V# = Low	-	4mA
Signal rise and fall time	-	200μs

10.4 PRESENT#

The PRESENT# signal is used by the system to detect whether the PSU is present. The signal pin is required to be shorter than other pins on the PSU. The pin is grounded inside the PSU.

Table 10-4 PRESENT# signal characteristics

Signal Characteristics	
Signal type	PSU side: The pin is directly grounded inside the PSU. System side: This signal is pulled up to 3.3 V by a 4.7-kilohm resistor and output to the system CPLD over a series resistor.
PRESENT# = Low	PSU is present.
PRESENT# = High	PSU is removed from the system.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

10.5 INSTALLED#

The INSTALLED# signal is used by the PSU to determine whether it has been inserted into the system. The signal pin is required to be shorter than other pins on the PSU. High level indicates that the PSU has not been inserted into the system and low level indicates that the PSU has been inserted into the system. When the INSTALLED# signal pin is left open, the PSU has no output. When inserted into the system, the PSU starts main output mode.

Table 10-5 INSTALLED# signal characteristics

Signal Characteristics	
Signal type	PSU side: This signal is pulled up to the 3.3 V auxiliary power source inside the PSU by a 4.7-kilohm resistor. System side: This pin is grounded directly.
INSTALLED# = Low	PSU is inserted into the system.
INSTALLED# = High	PSU is not inserted into the system.

Table 10-6 INSATLLED# output

INSATLLED# Output	**Minimum Value**	**Maximum Value**
Low level voltage	0 V	0.8 V
High level voltage	2.000 V	3.465 V
Sink current, and INSATLLED# = Low	-	4 mA
Signal rise and fall time	-	200 μs

10.6 OPOK#

The OPOK signal indicates whether the main output is normal. High level indicates the main input is normal. Low level indicates the main input is abnormal.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 10-4 Interconnect diagram of the OPOK signal

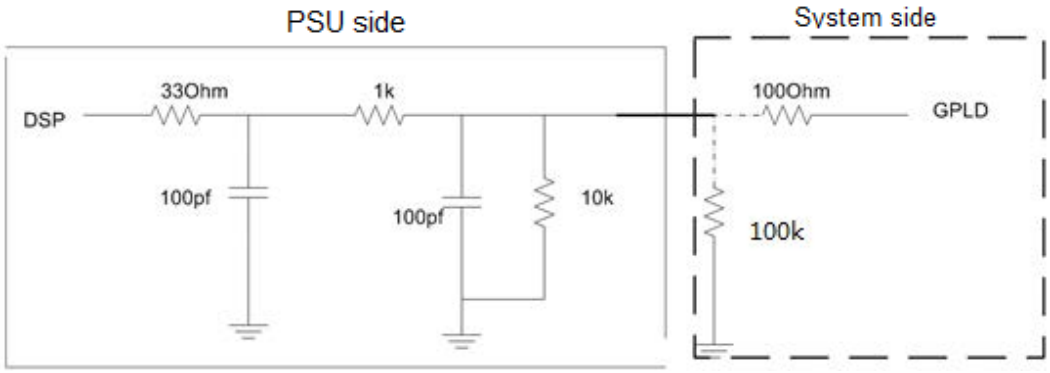


Table 10-7 OPOK signal characteristics

Signal Characteristics	
Signal type	PSU side: The DSP is output to the edge connector through RC filtering. System side: Pulled down to GND by a 100-kilohm resistor and connected to the system CPLD over a 100-ohm series resistor
OPOK = High	The main output is normal.
OPOK = Low	The main output is abnormal.

Table 10-8 OPOK output

OPOK Output	**Min.**	**Max.**
Low level voltage	0 V	0.6 V
High level voltage	2.200 V	3.465 V
Sink current, OPOK = Low	-	4 mA
Signal rise and fall time	-	200 µs

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

NOTE

- If the INSTALLED# signal is at high level, then the OPOK signal is at low level.
- In MV12 mode:
  - If the output voltage is higher than 11.5 V, OPOK is at high level;
  - If the output voltage is lower than 11.4 V, OPOK is at low level.
  - The time from when OPOK drops to 1.43 V to when the 12 V bus voltage drops to 9.5 V is greater than 100 μs (this is required in the case of input power failure, input overvoltage/undervoltage, fan fault, overtemperature, and output undervoltage, and is not required in scenarios such as output overcurrent or short circuit and output overvoltage).
- In MV6 mode:
  - If the output voltage is higher than 5.9 V, OPOK is at high level;
  - If the output voltage is lower than 5.8 V, OPOK is at low level.
- In the case of input power failure, input overvoltage, input undervoltage, fan fault, overtemperature, and output undervoltage, the PSU can report the OPOK fault in advance.
- After the input power fails, the OPOK# signal changes to low level. The OPOK# signal should not change to high level until the input power recovers.

10.7 IPOK

The IPOK signal is used to detect whether the PSU input is normal.

Figure 10-5 Interconnect diagram of the IPOK signal

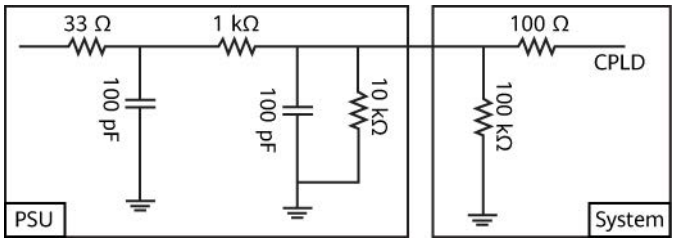


Table 10-9 IPOK signal characteristics

Signal Characteristics	
Signal type	PSU side: The power is output after RC filtering. System side: Pulled down to GND by a 100-kilohm resistor and connected to the system CPLD over a 100-ohm series resistor.
IPOK = High	The input is normal. (90 V AC < V_{in} < 264 V AC; 180 V DC < V_{in} < 300 V DC).
IPOK = Low	The input is abnormal (after AC or DC input undervoltage/overvoltage protection).

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Table 10-10 IPOK output

IPOK Output	Min.	Max.
Low level voltage	0 V	0.6 V
High level voltage	2.2 V	3.465 V
Sink current, IPOK = Low	-	4 mA
Source current, IPOK = High	-	4 mA
Signal rise and fall time	-	200 μs

10.8 IPOK LINK

The IPOK LINK signal is sent by the system to the PSU. It indicates that at least one PSU is present in the system and its input is normal.

Table 10-11 IPOK LINK signal characteristics

Signal Characteristics	
Signal type (PSU output signal)	PSU side: This signal is pulled up to the 3.3 V auxiliary power source inside the PSU by a 2.49-kilohm resistor. System side: This signal is output by CPLD over the drive circuit and pulled up to 3.3 V by a 4.7-kilohm resistor.
IPOK LINK = High	The standby power supply input is normal.
IPOK LINK = Low	The standby power supply input is abnormal.

Table 10-12 IPOK LINK output

IPOK LINK Output	Min.	Max.
Low level voltage	0 V	0.6 V
High level voltage	2.2 V	3.465 V
Sink current, IPOK LINK = Low	-	4 mA
Source current, IPOK LINK = High	-	4 mA
Signal rise and fall time	-	200 μs

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

10.9 IP PRESENT

IP PRESENT is a signal that controls the SV12 switch of the PSU. After IP PRESENT is at low level (valid), the PSU enters the SV12 output state. The designed overcurrent protection threshold is greater than or equal to 50 A in this case. When the IP PRESENT signal is at high level, the PSU maintains the MV12 output mode.

Table 10-13 IP PRESENT# signal characteristics

Signal Characteristics	
Signal type	PSU side: This signal is pulled up to the 3.3 V auxiliary power source inside the PSU by a 4.75-kilohm resistor. System side: This signal is output by CPLD over the drive circuit and pulled up to 3.3 V by a 4.7-kilohm resistor.
IP PRESENT# = High	The PSU does not act.
IP PRESENT# = Low	The PSU enters the SV12 output mode.

Table 10-14 IP PRESENT output

IP PRESENT Output	**Min.**	**Max.**
Low level voltage	0 V	0.6 V
High level voltage	2.0 V	3.465 V
Sink current, IP PRESENT = Low	-	4 mA
Source current, IP PRESENT = High	-	4 mA
Signal rise and fall time	-	200 µs

10.10 CYC_PWR#

The CYC_PWR# signal is sent to PSUs by the system to shut down or restore the MV12 main output of the PSU.

- The signal is valid if the CYC_PWR# signal is at low level for 100–150 ms. The PSU shuts down after the delay time (configurable) and then starts after the restart time (configurable) .
- The CYC_PWR# signal is invalid if both the OPOK and CYC_PWR# signals are low level.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

- The signal is invalid if the CYC_PWR# signal is at low level for less than 100 ms.
- The CYC_PWR# signal is invalid when a PSU is during delay shutdown or restarting. The CYC_PWR# signal is valid after the OPOK signal becomes high level.

Table 10-15 CYC_PWR# signal characteristics

Signal Characteristics	
Signal type	PSU side: This signal is pulled up to the 3.3 V auxiliary power source inside the PSU by a 2.49-kilohm resistor. System side: This signal is output by CPLD over the drive circuit and pulled up to 3.3 V by a 4.7-kilohm resistor.
CYC_PWR# = High	The PSU does not act.
CYC_PWR# = Low	The PSU enters power supply cycle power mode.

Table 10-16 CYC_PWR# output

CYC_PWR# Output	**Min.**	**Max.**
Low level voltage	0 V	0.8 V
High level voltage	2.0 V	3.465 V
Sink current, CYC_PWR# = Low	-	4 mA
Source current, CYC_PWR# = High	-	4 mA
Signal rise and fall time	-	200 μs

10.11 I-MON#

This signal is a 12 V current sharing signal.

Table 10-17 I_MON# signal characteristics

PSU side	**System side**
Internal current sharing bus.	The backplane directly connects the I-MON signals of all PSUs together.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

10.12 PS_INTERRUPT

The PS_INTERRUPT# signal indicates PSU I2C alarm interruption.

Table 10-18 PS_INTERRUPT# signal characteristics

Signal Characteristics	
Signal type	PSU side: Output over the drive circuit, no pull-up on the PSU side, or directly output by the DSP over a series resistor. System side: Pulled up to 3.3 V level and then reversely sent to the system over the MOSFET transistor.
PS_INTERRUPT= High	The PSU is normal.
PS_INTERRUPT = Low	The PSU generates an alarm.

10.13 EFUSEV

The system samples the input current of the main service load branch (12 V), converts the current to a linear voltage analog signal, and sends the signal to the EFUSEV pin of the PSU. If the value of EFUSEV is greater than 1.0 V, the main service of the system is working. In this case, the PSU cannot enable deep sleep and automatic PFC shutdown. If the value of EFUSEV is less than 0.8 V, the main service of the system is powered off or does not work. In this case, the PSU can enable deep sleep and automatic PFC shutdown.

Table 10-19 EFUSEV signal characteristics

Signal Characteristics	
Signal type	PSU side: Send to the PSU DSP by a 100-ohm series resistor. System side: ● If this function is enabled, the system sends the voltage analog signal of the main service circuit to the PSU, or CPLD outputs this signal over the drive circuit and this signal is pulled up to 3.3 V level by a 4.7-kilohm resistor. ● If this function is disabled, this signal is pulled up to 3.3 V level by a 4.7-kilohm resistor.
EFUSEV = High	Disable deep sleep and automatic PFC shutdown.
EFUSEV = Low	Enable deep sleep and automatic PFC shutdown.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Table 10-20 EFUSEV output

EFUSEV Output	Min.	Max.
Low level voltage	0 V	0.8 V
High level voltage	1.0 V	3.465 V

10.14 SMART_ON#

The SMART_ON signal is used to wake up a cold-standby PSU (low level by default).

- Set an active PSU: The system sets one of the PSUs to be the active PSU (by sending the **D0h 0x01** command). The active PSU sets the SMART_ON signal to high level. The PSU enters cold standby mode.
- Standby PSU setting: The system sends a **(D0h 0x02h/0x03h/0x04h)** command to the standby PSU. Then the standby PSU disconnects the DC/DC circuit.
- Wake up the standby PSU: When the host is faulty, the active PSU sets the SMART_ON signal to low level to wake up the standby PSU.

Table 10-21 SMART_ON signal characteristics

Signal Characteristics	
Signal type	The SMART_ON signals of all PSUs are connected together.
SMART_ON = High	The PSU enters cold standby mode.
SMART_ON = Low	The PSU exits from cold standby mode.

Table 10-22 SMART_ON output

SMART_ON Output	Min.	Max.
Low level voltage	0 V	0.8 V
High level voltage	2.0 V	3.6 V

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

11 Communication

11.1 Data Link Layer Protocol

11.2 Network Layer Protocol

11.3 Application Layer Protocol

11.4 Online Upgrade

11.5 Black Box Function


11.1 Data Link Layer Protocol

The link layer uses the PMBus V1.2 protocol and complies with *PMBus_Specification_Part_I_Rev_1-2_20100906* and *PMBus_Specification_Part_II_Rev_1-2_20100906*.

11.1.1 I2C Signal

The PSU includes a main control unit (MCU) used for monitoring and an electrically erasable programmable read only memory (EEPROM) of 256 bytes used for storing fault records. The PSU can use the EEPROM in the MCU to store fault records. The system sends commands to the MCU over the I2C bus to read fault records from the PSU. **Figure 11-1** shows the I2C interface communication diagram.

Figure 11-1 I2C interface

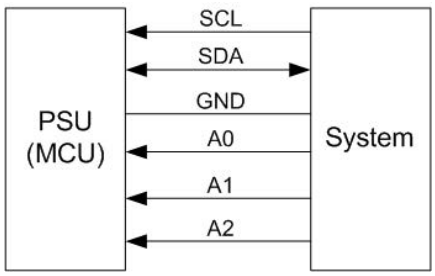

SCL and SDA are the serial clock signal and the serial data signal of the I2C interface.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

PSU side:	System side:
• SCL and SDA must be pulled up to 3.3 V by a 20-kilohm resistor. • The voltage source must be generated by the auxiliary power source and system-side 12 V bus that supplies power to the secondary MCU at the same time. • When power is supplied from the system side, the fuse or overcurrent/short-circuit protection circuit must be used. • The capacitance on the SCL and SDA in the PSU cannot exceed 66 pF.	The voltage of SCL and SDA is pulled up to 3.3 V by increasing the resistance by 3-10 kilohm.

11.1.2 I2C Address

Addresses A2, A1, and A0 are allocated to a PSU.

PSU side:

- Interconnection in the PSU: A2, A1, and A0 must be pulled up to the internal voltage source through a 10-kilohm (reference value) resistor. The voltage source must be the voltage source that supplies power to the secondary MCU. The voltage source is supplied by the internal auxiliary power source, which is generated by the PSU and system-side 12 V bus at the same time.
- When power is supplied from the system side, the fuse or overcurrent/short-circuit protection circuit must be used.

System side:

If this signal is connected to GND through a 300-ohm resistor, the address bit is 0. If this signal is left open, the address bit is 1.

The I2C addresses of the PSU from high to low are A2, A1, and A0. See **Table 11-1** for details.

Table 11-1 I2C address

PSU A2/A1/A0	0/0/0	0/0/1	0/1/0	0/1/1	1/0/0	1/0/1	1/1/0	1/1/1
MCU	0xB0	0xB2	0xB4	0xB6	0xB8	0xBA	0xBC	0xBE


11.1.3 Data Transmission Mode

The I2C transmission standard is used. Data transmission rate is 100 Kbit/s. The timing definition of lower-layer signals, such as START, STOP, R/W, ADDRESS,

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

ACK/NACK, bus arbitration, clock synchronization, and clock extension (except bus timeout), complies with PSMI. See **Figure 11-2** for the I2C data transmission mode.

Figure 11-2 I2C data transmission mode

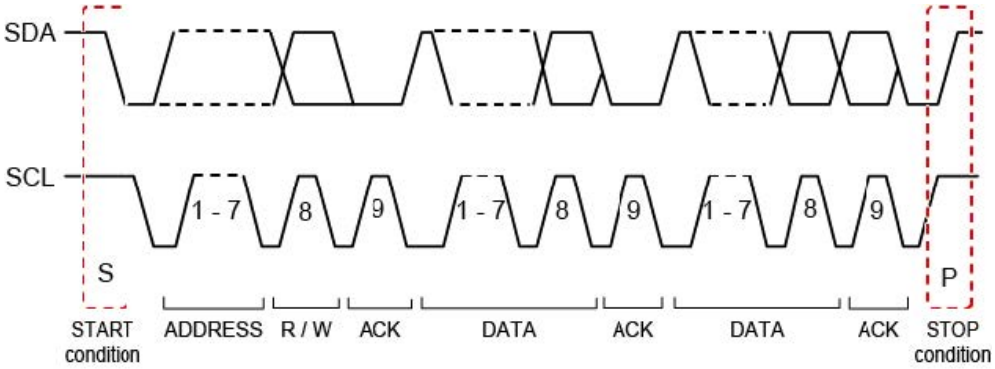

11.1.4 Bus Timeout

The I2C program of the PSU is reset to 0 if the PSU detects that the SCL or SDA data line is held low for more than 300 ms.

11.2 Network Layer Protocol

11.2.1 Secondary Addressing Method


The PSU serves as the secondary device, and the PSU address is identified by the hardware and assigned in static mode. The primary device accesses secondary devices independently based on the secondary device addresses determined by the hardware

11.2.2 Data Packet Verification Mode

To ensure data integrity and accuracy during communication, the PSU uses the 8-bit CRC checksum mechanism.

The last byte of each sent and received communication is the CRC code of this signal.


- When the primary device sends data to a secondary device, PEC (CRC) contains the address byte, read/write bit, command byte, and multiple pieces of data to be sent.
- The primary device obtains data from a secondary device: PEC (CRC) sent by the secondary device contains the address bytes obtained by the secondary device, read/write bits, command codes, and data bytes sent by the secondary device.



 Copyright © XFUSION INTERNATIONAL PTE. LTD.

11.2.3 Data Transmission

PMBus communication supports 10 data formats in total. All data formats adopt PEC verification.

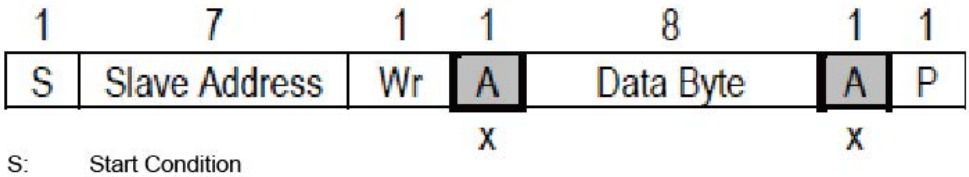


S:	Start Condition
Sr:	Repeated start condition
Rd:	Read (bit value of 1)
Wr:	Write (bit value of 0)
x:	Shown under a field indicates that field is required to have the value of 'x'
A:	Acknowledge (this bit position may be '0' for an ACK or '1' for a NACK)
P:	Stop condition
PEC:	Packet Error Code
...:	Continuation of protocol


Master-to-Slave

Slave-to-Master


- Send Byte command and response.




- Receive Byte command and response.




- Write Byte command and response.




- Write Word command and response.

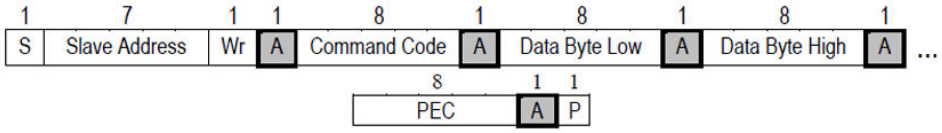

- Read Byte command and response.

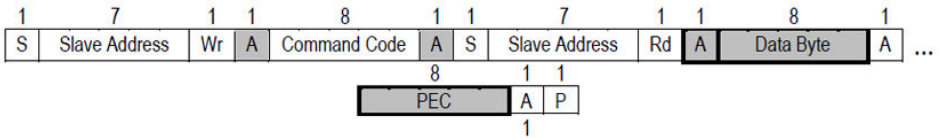


- Read Word command and response.

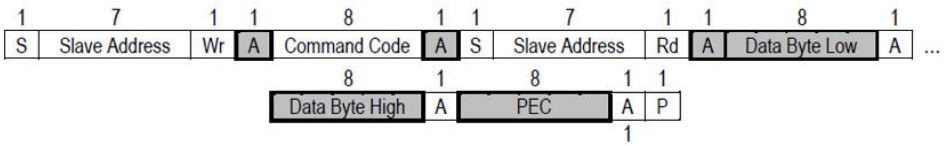


 Copyright © XFUSION INTERNATIONAL PTE. LTD.


- Process Call command and response.

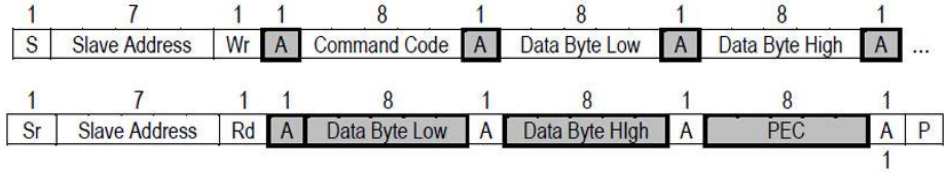


- Block Write command and response.

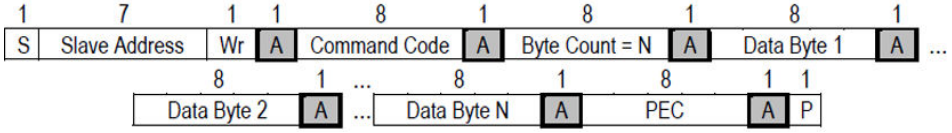

- Block Read command and response.

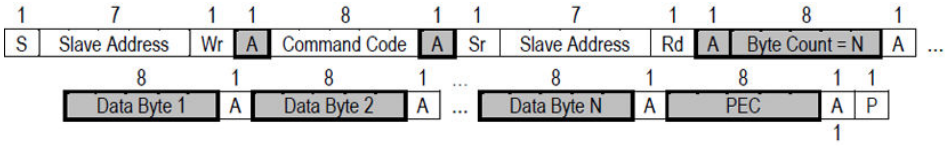

- Block Read – Block Write Process Call command and response.

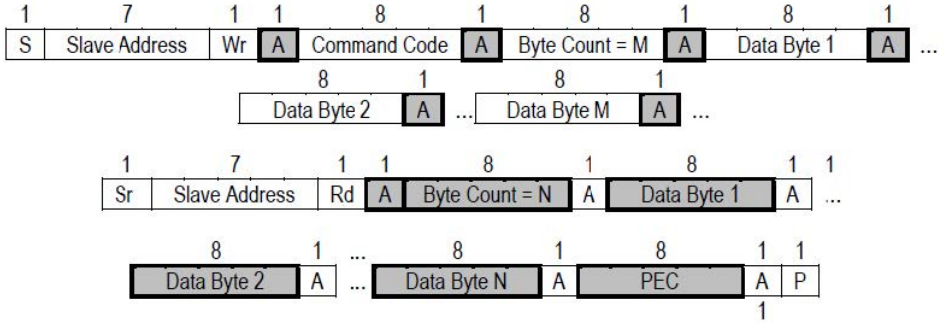

11.3 Application Layer Protocol

NOTE

- The PMBus alarm is not latched. If a PSU is faulty, an alarm is reported. After the PSU fault is rectified, the alarm is automatically cleared.
- If the PSU is faulty, the system sends **CLEAR_FAULTS** to clear the alarm. If the alarm persists, the PSU continues to report the alarm.
- The **FAULT** alarm and the **WARNING** alarm are mutually exclusive.


11.3.1 Data Format

Linear 11 Data Format

The Linear 11 data format is a two-byte value with an 11-bit binary signed mantissa (two's complement) and a 5-bit binary signed exponent (two's complement), as shown in **Figure 1 Linear 11 data format**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 11-3 Linear 11 data format

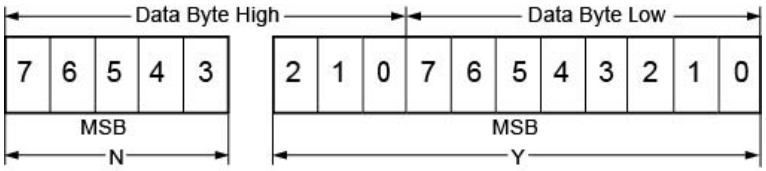

The relationship between N, Y, and actual value X is given by the following equation:


$X = Y \times 2^N$

- Where: Y is the 11-bit, binary signed mantissa (two's complement).
- N is the 5-bit, binary signed exponent (two's complement).

Linear 16 Data Format

The Linear 16 data format is a two-byte value with a 16-bit binary unsigned mantissa and a 5-bit binary signed exponent (two's complement), as shown in **Figure 11-4**.

Figure 11-4 Linear 16 data format

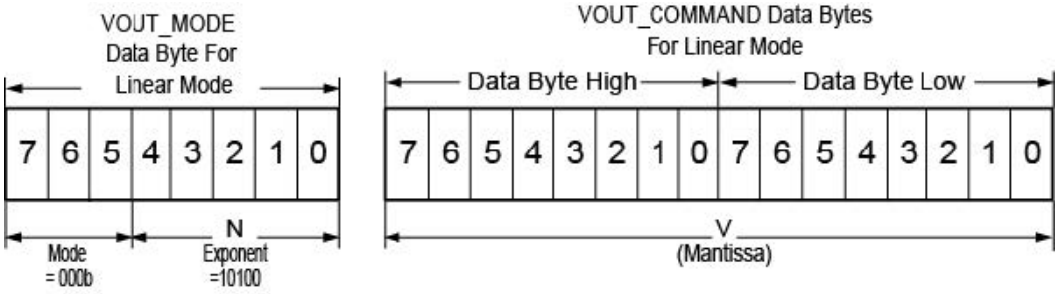

The output voltage is calculated as follows:

$Voltage = V \times 2^N$

- Where: Voltage is the output voltage value.
- V is the 16-bit unsigned integer.
- N is the 5-bit signed integer (two's complement), and N is –12.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

11.3.2 Commands

Commands

Command ID	Command Name	Data Type	Data Format	Description
0x01	PMBUS_CMD_OPERATION	Read/ Write byte	HEX	Remote startup and shutdown ● 0x80: Start the PSU. ● 0x40: Soft shutdown. The PSOK time sequence meets the requirements. ● 0x00: Reset the PSU.
0x03	PMBUS_CMD_CLEAR_FAULTS	Write byte	HEX	Clearing faults; No parameter available; Sending the command with CRC and clearing the fault alarms after receiving the command.
0x20	PMBUS_CMD_VOUT_MODE	Read byte	HEX	Output mode
0x21	PMBUS_CMD_VOUT_CTRL	Read/ Write word	LINEAR 16 Q12	Output voltage configuration. In non-equipment mode, the voltage range must be 11.97 V to–12.35 V.
0x31	PMBUS_CMD_RATED_POUT	Read word	LINEAR 11	Maximum output power
0x3A	PMBUS_CMD_FAN_CONFIG	Read/ Write byte	HEX	Fan configuration; default value: 0xD0
0x3B	PMBUS_CMD_FAN_COMMAND	Read/ Write word	HEX	Fan speed setting
0x78	PMBUS_CMD_STATUS_BYTE	Read/ Write byte	HEX	Status single-byte
0x79	PMBUS_CMD_STATUS_WORD	Read/ Write word	HEX	Status dual-byte
0x7A	PMBUS_CMD_STATUS_VOUT	Read/ Write byte	HEX	Output voltage status
0x7B	PMBUS_CMD_STATUS_IOUT	Read/ Write byte	HEX	Output current status

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Command ID	Command Name	Data Type	Data Format	Description
0x7C	PMBUS_CMD_STATUS_INPUT	Read/ Write byte	HEX	Input status
0x7D	PMBUS_CMD_STATUS_TEMP	Read/ Write byte	HEX	Temperature status
0x7E	PMBUS_CMD_STATUS_CML	Read/ Write byte	HEX	CMD status
0x80	PMBUS_CMD_STATUS_MFR_SPECIFIC	Read/ Write byte	HEX	MFR status
0x81	PMBUS_CMD_STATUS_FANS	Read/ Write byte	HEX	Fan status
0x88	PMBUS_CMD_READ_VIN	Read word	LINEAR 11	Input voltage
0x89	PMBUS_CMD_READ_IIN	Read word	LINEAR 11	Input current
0x8B	PMBUS_CMD_READ_VOUT	Read word	LINEAR 16	Output voltage
0x8C	PMBUS_CMD_READ_IOUT	Read word	LINEAR 11	Output current
0x8D	PMBUS_CMD_READ_TEMPERATURE_1	Read word	LINEAR 11	Ambient temperature
0x8E	PMBUS_CMD_READ_TEMPERATURE_2	Read word	LINEAR 11	Primary side temperature (MOS1)
0x8F	PMBUS_CMD_READ_TEMPERATURE_3	Read word	LINEAR 11	Secondary side temperature (MOS1)
0x90	PMBUS_CMD_READ_FAN_SPEED	Read word	DEC	Fan speed
0x95	PMBUS_CMD_READ_FREQUENCY	Read word	LINEAR 11	PSU frequency
0x96	PMBUS_CMD_READ_POUT	Read word	LINEAR 11	Output power
0x97	PMBUS_CMD_READ_PIN	Read word	LINEAR 11	Input power

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Command ID	Command Name	Data Type	Data Format	Description
0x98	PMBUS_CMD_PMBUS_REVISION	Read byte	DEC	PMBus version
0x99	PMBUS_CMD_MFR_ID	Read block	ASCII	Vendor name
0x9A	PMBUS_CMD_MFR_MODEL	Read/ Write block	ASCII	PSU name
0x9B	PMBUS_CMD_HARD_VERSION	Read block	ASCII	Hardware version
0x9D	PMBUS_CMD_MFR_DATE	Read/ Write block	ASCII	Production date
0x9E	PMBUS_CMD_MFR_SERIAL	Read/ Write block	ASCII	Product SN
0xBD	PMBUS_CMD_E_LABLE_LENGTH	Read/ Write block	HEX	Length and frame length of the e-label
0xBE	PMBUS_CMD_E_LABLE_INDEX	Read/ Write word	DEC	E-label number
0xBF	PMBUS_CMD_E_LABLE_CONTENT	Read/ Write block	ASCII	E-label content
0xC0	PMBUS_CMD_POWER_CYCLE_TIME	Read/ Write word	DEC	Shutdown delay time ● Bits F–8: PSU shutdown delay time ● Bits 7–0: PSU shutdown time
0xC6	PMBUS_CMD_WARNING_COUNT1	Read/ Write word	DEC	Alarm counter 1; Writing 0x0000 clears the alarm and recounts the alarm. Writing other values does not take effect.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Command ID	Command Name	Data Type	Data Format	Description
0xC7	PMBUS_CMD_WARNING_COUNT2	Read/ Write word	DEC	Alarm counter 2; Writing 0x0000 clears the alarm and recounts the alarm. Writing other values does not take effect.
0xC8	PMBUS_CMD_WARNING_COUNT3	Read/ Write word	DEC	Alarm counter 3; Writing 0x0000 clears the alarm and recounts the alarm. Writing other values does not take effect.
0xCC	PMBUS_CMD_MAX_VIN	Read/ Write word	LINEAR 11	Maximum input voltage; Writing 0x0000 clears the alarm, writing other values does not take effect.
0xCD	PMBUS_CMD_MAX_IIN	Read/ Write word	LINEAR 11	Maximum input current; Writing 0x0000 clears the alarm, writing other values does not take effect.
0xCE	PMBUS_CMD_PS_CONTROL	Read/ Write word	HEX	PSU control register; default value: 0x0000
0xCF	PMBUS_CMD_READ_POWER_TYPE	Read word	HEX	PSU types Currently, the PSU always reports 3, that is, AC & 240HVDC. The meanings of the data are as follows: ● 0: AC ● 1: 48 V DC ● 2: HVDC ● 3: AC & 240HVDC ● 4: AC & 240HVDC & 380HVDC
0xD0	PMBUS_CMD_SMART_ON_CONFIG	Read/ Write byte	HEX	Cold standby configuration command

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Command ID	Command Name	Data Type	Data Format	Description
0xD4	PMBUS_CMD_SET_PSALERT	Read/ Write byte	HEX	Forcible alarm command. ● Write 0x20 to forcibly interrupt the signal alarm. ● Write 0x00 to clear the software control and restore the PSU normal control. ● Writing other values is invalid.
0xD6	PMBUS_CMD_MAX_PIN	Read/ Write word	LINEAR 11	Maximum input power
0xD7	PMBUS_CMD_MAX_POUT	Read/ Write word	LINEAR 11	Maximum output power
0xD8	PMBUS_CMD_MAX_TEMP_MONITOR	Read/ Write word	LINEAR 11	Maximum temperature of the PSU air intake vent
0xDB	PMBUS_CMD_MAX_12V_IOUT	Read/ Write word	LINEAR 11	Maximum output current
0xDE	PMBUS_CMD_READ_PART_NUMBER	Read/ Write block	ASCII	xFusion number
0xDF	PMBUS_CMD_READ_INPUT_TYPE	Read word	HEX	Input voltage type PSU real-time input status: ● 0: no input or input voltage abnormal ● 1: AC input ● 2: HVDC ● 3: low-voltage DC (no such input is available)
0xE0	PMBUS_CMD_WRITE_EVENT_INDEX	Write byte	DEC	Black box No.
0xE0	PMBUS_CMD_READ_EVENT_LOG	Read block	HEX	Black box content
0xE1	PMBUS_CMD_WRITE_EVENT_LOG	Write word	HEX	Writing logs

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Command ID	Command Name	Data Type	Data Format	Description
0xE4	PMBUS_CMD_DCDC_SOFT_VER	Read word	HEX	DCDC software version
0xE7	PMBUS_CMD_PFC_SOFT_VER	Read word	HEX	DCDC software version
0xED	PMBUS_CMD_LED_CTRL	Read/ Write byte	HEX	LED control If bit 0 and bit 1 are written to 1 at the same time, the command is invalid. ● Bit 7: 1 indicates active PSU control (the indicator is valid), and 0 indicates PSU automatic control. ● Bit 1: 1 indicates that the orange LED indicator is on, and 0 indicates that it is off. ● Bit 0: 1 indicates that the green LED indicator is on, and 0 indicates that it is off.
0xEE	PMBUS_CMD_LOAD_SHARE_SCALE	Read/ Write byte	DEC	Coefficient of proportionality for current sharing, default value: 1. Value range: 1 to 8. For example, 1 indicates 1:1 and 4 indicates 1:4.
0xFA	PMBUS_CMD_UPDATE_TIME	Write block	TIME	Time serving
0xFB	PMBUS_CMD_LOAD_PARAM	Read block	HEX	Load parameters
0xFC	PMBUS_CMD_LOAD_START	Read/ Write word	HEX	Load commands
0xFD	PMBUS_CMD_LOAD_DATA	Write block	HEX	Load data

11.3.3 Command Descriptions

PS_CONTROL (0xCEh): PSU control register.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Table 11-2 PS_CONTROL(0xCEh)

Byte	Bit No.	Status Bit Name	Description
High	F	SF12 (Special Function 12): Fan Shutdown	Fan shut down command. 1: Fan is shut down forcibly; 0: Fan power supply is controlled by itself.
	E	SF11 (Special Function 11): N+R flag	Flag of the N+R power standby function
	D	SF10 (Special Function 10): Efficiency Optimized Mode	Reserved
	C	SF9 (Special Function 9): Holdup Optimized Mode	Reserved
	B	SF8 (Special Function 8): Deep Sleep Mode	0b: Disable deep sleep mode; 1b: Enable deep sleep mode. ● If SF8 is set to 1, the PSU enters deep sleep mode. In this mode, the PFC, fan, and output of the PSU are disabled. – The PSU is in parallel mode. – EFUSEV is less than 0.8 V. ● If the standby PSU is powered off (the output voltage is lower than 5.7 V), the PSU automatically exits sleep mode. If SF8 is set to 1, the PSU disables the output and restarts. ● SF8 clearing condition: In SF8 mode, the standby PSU experiences an output power failure (the output busbar voltage is lower than 5.7 V).
	A	SF7 (Special Function 7): MV6 control	0b: MV6 unshielded mode; 1b: MV6 shielded mode ● This setting is effective only when PSON12V# is at low level and the PSU enters MV12 mode. ● If MV6 mode is shielded and the PSU experiences overtemperature or other failures in MV12 mode, the PSU shuts down the output directly. Clearing condition: The system sets the bit value to 0 or the PSU powers on again (DSP powers on again).

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Byte	Bit No.	Status Bit Name	Description
	9	SF6 (Special Function 6): PFC Auto Shutdown	0b: Disable the PFC automatic shutdown control function; 1b: Enable the PFC automatic shutdown control function.
	8	Reserved	Reserved
Low	7	SF4 (Special Function 4): Adjustable V_{out}	0b: Disable output voltage adjustment; 1b: Enable output voltage adjustment. If SF4 is set to 1, the PSU can adjust the voltage by sending the **21h** command, and the current share function fails.
	6	Reserved	Reserved
	5	SF2 (Special Function 2): Fan Fault Enabled	0b: Shut down output in case of fan failure; 1b: Do not shut down output in case of fan failure. By default, the PSU shuts down if the PSU fan has failed for more than 10s. If the system sets the SF2 value to 1, the output is not shut down in case of fan failure. The output is shut down if overtemperature protection is triggered.
	4	SF1 (Special Function 1)	Reserved
	3	Reserved	Reserved
	2	Interrupt bit	0b: PSU is not interrupted; 1b: PSU is interrupted. ● An external system cannot set this bit. The value 1 is invalid. ● The system can clear this bit. ● This bit can be cleared if PSON12V# changes between high level and low level or the PSU powers on again. ● After clearing, the PS_INTERRUPT# signal of the PSU changes to high level.
	1	Warning Event Mask	0b: The PSU is not interrupted if a PSU alarm event is generated; 1b: The PSU is interrupted if a PSU alarm event is generated.
	0	Fault Event Mask	0b: The PSU is not interrupted if a PSU shutdown event is generated; 1b: The PSU is interrupted if a PSU shutdown event is generated.

11.4 Online Upgrade

Both the primary and secondary sides of the PSU support online upgrade.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

11.5 Black Box Function

The PSU has 440-byte space for storing fault logs. The PSU provides a read channel for external systems by the **Read Event Log** command.

11.5.1 Runtime Counter

The total runtime is the sum of the time when the PSU works properly (OPOK is normal), is presented in the unit of seconds, and occupies four bytes.

11.5.2 Event Log Update


The PSU maintains a circular event log of the last ten records. Before saving the event log, the PSU shall set the event update flag in the event log to 1. Each log shall start with an event number followed by a 4-byte runtime (measured in seconds). The total runtime must be updated before the log is saved.

The PSU abnormality alarm status, input voltage, input current, output voltage, output current, temperature, fan speed, maximum input voltage, maximum output current, PS control, and other information will be stored in the fault record register. No output due to the hot swap, the switch PSU output operation and the **CYC_PWR** issued by the system cannot be saved by the PSU fault record function. Faults including input power failure, input overvoltage, input undervoltage, output overvoltage, output overcurrent/short-circuit, overtemperature, fan fault, and PSU damage will be stored. If a new fault is the same as the latest record in the event log, this fault will not be stored. That is, two consecutive same faults cannot exist in the fault record.


The runtime counter shall be updated every time an event occurs regardless of whether the event is written into the event log. When there are more than 10 events, the 11th event shall overwrite the 1st event, the 12th event shall overwrite the 2nd event, and so on.

11.5.3 Format of Reading Logs

- Write Byte Index (0–10)



- Read Block (N = 40)

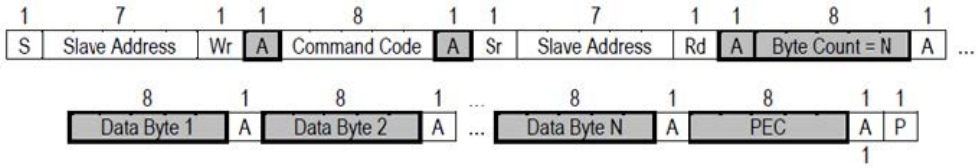

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

12 Heat Dissipation Requirements and Fan Control

The PSU supports forcible air cooling for heat dissipation. The PSU uses 40 mm (W) x 40 mm (H) fans. The air blows in from the rear and blows out from the front.

Heat Dissipation Requirements


- In MV6 mode, the PSU will not trigger overtemperature protection when the fan works at the lowest speed.
- In MV12 mode, the PSU will not trigger overtemperature protection when the fan works at the preset speed.
- The fan cannot stop rotating in the case of reverse power supply.
- Before overtemperature protection, the fan must operate at full speed.
- When the temperature at the air intake vent of the PSU reaches 45°C (113°F), the fan speed can be adjusted.

Fan Power Supply Mode

- The fan obtains power from the output bus. A fan fault cannot cause a system alarm or reset. The bus voltage must be greater than or equal to 11 V and the time when the bus voltage is lower than 11.4 must not exceed 100 μs.
- The fan should be isolated if a fault occurs.
- The system can deliver a command to turn off the fan.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 12-1 Fan power supply circuit

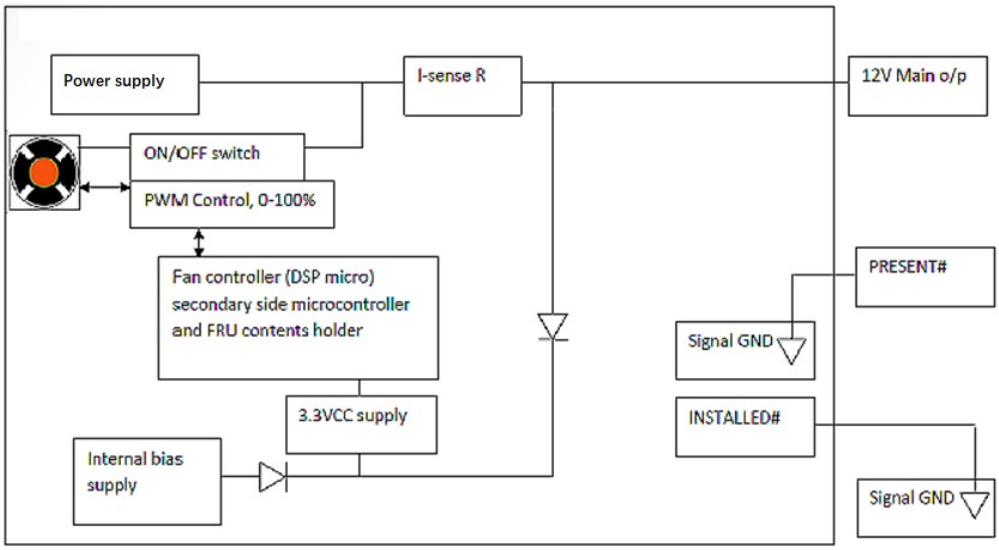

Noise Requirements

Table 12-1 Noise Requirements

Item	Load	Test Method	Remarks
Noise requirements	50 dB	Air inlet temperature 25°C (77°F), noise sensor 1 m away from the PSU, 40% load	The noise sensor should face the air exhaust vent of the fan.

Fan Protection

- If PSUs works in parallel and one of the fans or the power supply circuit is short-circuited or open-circuited, the 12 V and 6 V routes of the system backplane should not exceed the normal dynamic change voltage restriction specifications.Communication should be normal.
- The fan fault detection circuit can report a fault only when it detects a fan or fan circuit fault and the fault lasts for over 20s. (Note: Long-time fan operation ages the internal bearing, which prolongs fan startup time. The fan is considered to be faulty only when it does not reach the specified rotational speed after more than 20s.)
- A fan fault can be rectified.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

13 Product Storage, and Transportation

Storage Requirements

The product must be stored in a dry and well-ventilated warehouse where the temperature ranges from –40°C to +85°C (-40°F to +185°F), the relative humidity is not greater than 80%, and no corrosive gas exists.

Transportation Requirements

During transportation, the product must be securely placed in a packing case. The packing case must comply with related international standards and be printed with marks such as "Handle with care" and "Keep dry". The packing case containing the product can be transported by any means. The packing case must be protected against rains, snows, and mechanical impact during transportation.

Enclosure Protection

Table 13-1 Enclosure protection level

Item	Requirement
Enclosure protection level	IP20 (normal maintenance surface)

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

A Appendix

A.1 EMC Requirements

Parameter	Conditions	Criterion
Conducted emission (CE)	6 dB	EN 55032, class A
Radiated emission (RE)	6 dB	EN 55032, class A
	6 dB, 30 MHz–1 GHz	FCC Part15, class A
Electrostatic discharge (ESD)	Contact: 6 kV, air: 8 kV	IEC 61000-4-2, criterion B
	Contact: 8 kV, air: 15 kV	IEC 61000-4-2, criterion C
Electrical fast transient (EFT)	±2 kV	IEC 61000-4-4, criterion B
Radiated susceptibility (RS)	10 V/m, 80 MHz-6 GHz	IEC 61000-4-3, criterion A
Conducted susceptibility (CS)	10 V, 150 kHz-80 MHz	IEC 61000-4-6, criterion A

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Parameter	Conditions	Criterion
Power magnetic susceptibility (PMS)	30 A/m	IEC 61000-4-8: 2001, criterion A
Surge	AC input port: ● Differential mode: ±2.5 kV for L to N (1.2/50 μs, 2-ohm) ● Common mode: ±2.5 kV for L to PE, N to PE, and L and N to PE (1.2/50 μs, 12-ohm)	IEC 61000-4-5, criterion B
	HVDC input port: ● Differential mode: ±2 kV for P to N (1.2/50 μs, 2-ohm) ● Common mode: ±2 kV for P to PE, N to PE, and P and N to PE (1.2/50 μs, 12-ohm)	
Voltage fluctuation and flicker	Voltage fluctuation and flicker limit of class A products	IEC 61000-3-3
Current harmonics emission	Harmonic current limit of class A products	IEC 61000-3-2
Dip (AC)	Dip to 0% UT, single PSU 100% load, hold-up time: 10 ms	IEC 61000-4-11, criterion A
	Dip to 0% UT, single PSU 50% load, hold-up time: 20 ms	IEC 61000-4-11, criterion A
	Dip to 70% UT, hold-up time: 500 ms	IEC 61000-4-11, criterion B
	Dip to 0% UT, hold-up time: 5000 ms	IEC 61000-4-11, criterion C
Dip (HVDC)	Dip to 40% UT, hold-up time: 1 ms/3 ms/10 ms/30 ms/100 ms/300 ms/1000 ms	IEC 61000-4-11, criterion B
	Dip to 70% UT, hold-up time: 1 ms/3 ms/10 ms/30 ms/100 ms/300 ms/1000 ms	IEC 61000-4-11, criterion B
	Dip to 0% UT, hold-up time: 1 ms/3 ms/10 ms/30 ms/100 ms/300 ms/1000 ms	IEC 61000-4-11, criterion B

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Parameter	Conditions	Criterion
	Dip to 80% UT, hold-up time: 100 ms/300 ms/1000 ms/ 3,000 ms/10,000 ms	IEC 61000-4-11, criterion A
	Dip to 120% UT, hold-up time: 100 ms/300 ms/1000 ms/ 3,000 ms/10,000 ms	IEC 61000-4-11, criterion A
Criterion A: The performance is normal within the technical requirements. (Normal output voltage: No alarm is generated by the alarm signal.) Criterion B: The PSU passes the test with the server. During the test, the PSU output voltage should be kept within the normal range, no alarm is generated by the alarm signal, and the criterion module B of DC dip can be restarted. Criterion C: An automatic reset of short-term function interruption is allowed, and long-term function interruption or manual reset is not allowed.		

A.2 Product Safety Testing

Dielectric Strength Testing

Test Item	Min. Test Voltage	Test Time	Leakage Current	Arching Determination
Input and PE	2500 V DC	1 min	≤ 10 mA	No breakdown or arcing.
	1500 V AC	1 min	≤ 10 mA	No breakdown or arcing.
Input to output	4242 V DC	1 min	≤ 10 mA	No breakdown or arcing.
Output and PE	GND of the 12 V output and the PE are short-circuited inside the PSU.			

NOTE

Input to output must meet the reinforced insulation requirements after the output ground is disconnected from the PE.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Ground Continuity Testing

Test Item	Maximum Test Voltage	Test Current	Maximum Resistance	Test Duration
PE input and shell	12 V	25 A	0.1 ohm	Until the readings are stable.

NOTE

This test item is applicable only to power supply devices with metal shells or L-shaped supports that are connected to the PE.

A.3 Reliability

Parameter	Min.	Typ.	Max.	Unit	Notes & Conditions
Mean time between failures (MTBF)	-	500,000	-	Hours	Telcordia SR332, V_{in} = 230 V AC/ 240 V DC; rated load, T_A = 25ºC

 Copyright © XFUSION INTERNATIONAL PTE. LTD.